


# MITSUBISHI

## GT Simulator Version5

### Operating Manual

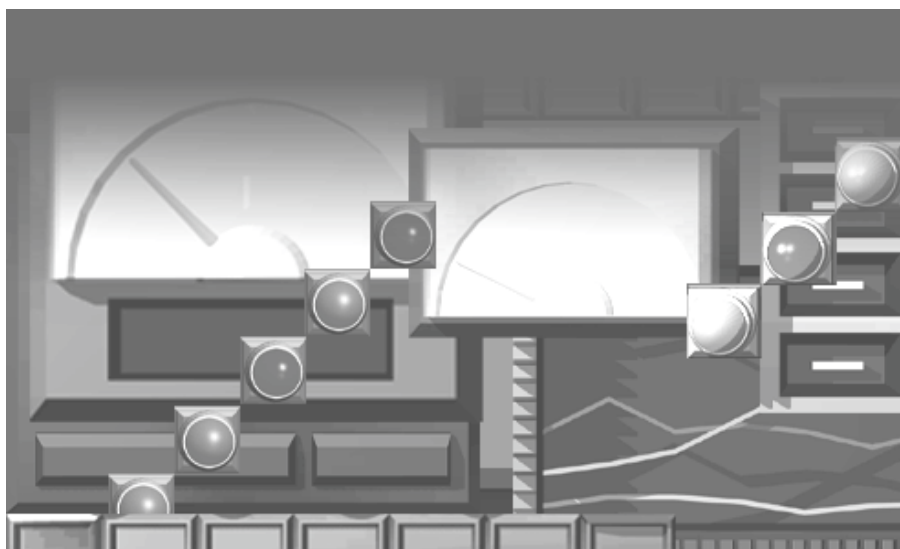

*Graphic Operation Terminal*  
**900**  
series



**MELSOFT**  
Integrated Software

**SW5D5C-GTWORKS-E**

MITSUBISHI Graphic Operation Terminal

# • SAFETY PRECAUTIONS •

(Always read these instructions before using this equipment.)

Before using this product, please read this manual and the relevant manuals introduced in this manual carefully and pay full attention to safety to handle the product correctly.

The instructions given in this manual are concerned with this product. For the safety instructions of the programmable controller system, please read the CPU module user's manual.


In this manual, the safety instructions are ranked as "DANGER" and "CAUTION".



Indicates that incorrect handling may cause hazardous conditions, resulting in death or severe injury.



Indicates that incorrect handling may cause hazardous conditions, resulting in medium or slight personal injury or physical damage.

Note that the  CAUTION level may lead to a serious consequence according to the circumstances. Always follow the instructions of both levels because they are important to personal safety.

Please save this manual to make it accessible when required and always forward it to the end user.

## [Test Operation Precautions]

### DANGER

- GT Simulator is designed to simulate the actual GOT to debug created screens. However, we do not guarantee the operations of the GOT and PLC CPU after debugging.  
After performing debugging on GT Simulator, connect the GOT and PLC CPU and perform ordinary debugging before starting actual operation.  
Not using the actual GOT and PLC CPU for debugging may result in accidents due to incorrect outputs or malfunctions.

## Precautions for using this software (important)

### 1. Memory of the personal computer used

Processing may be terminated by Windows<sup>®</sup> on some personal computer models having main memory of not more than 32M bytes. Therefore, use them after increasing the main memory to 32M bytes or more.

### 2. Free space on the hard disk

While this software is running, free space of at least 50M byte is required on the hard disk.

Since free space of 50M byte is required by Windows<sup>®</sup> as the swap area, Windows<sup>®</sup> may forcibly terminate the program if that free space is used up while the drawing software is running. Produce a sufficient amount of free space on the hard disk before using the drawing software.

When GT Simulator is used with GX Developer or GX Simulator, free space is required separately. Refer to the GX Developer or GX Simulator Operating Manual (Start up Manual) for the free space required for use of GX Developer or GX Simulator.

### 3. Instructions for displaying any line other than a continuous line (such as a dotted line) in boldface type

When any line other than a continuous line is drawn in boldface type, the personal computer screen may not display the line type properly. However, it is displayed properly on the GOT and there are no problems in data.

Please understand that it may be different from the actual image during simulation.

SPREAD

Copyright (C) 1999 Far Point Technologies, Inc

REVISIONS

\* The manual number is given on the bottom left of the back cover.

Print Date	* Manual Number	Revision
Apr., 2000	SH (NA)-080120-A	First edition
Oct., 2000	SH (NA)-080120-B	Partial corrections Section 2.1.2 Partial additions Section 2.2.2
Nov., 2000	SH (NA)-080120-C	Partial corrections Section 3.3.1, Section 4.1 Partial additions Section 3.1, Section 4.2, Appendix 1.1 Additions Section 3.4, Chapter 7
Feb., 2001	SH (NA)-080120-D	Partial corrections Section 3.4, Section 5.2 Partial additions Section 3.1, Section 5.2.1, Chapter 8
May., 2001	SH (NA)-080120-E	Partial corrections Section 3.2 Partial additions Section 2.1.2, Section 2.2.1, Section 2.2.2, Section 3.4
Jun., 2001	SH (NA)-080120-F	Partial additions Section 7.2,
Aug., 2001	SH (NA)-080120-G	Partial corrections Section 2.1.2, Section 3.2, Section 5.1, Section 5.5 Additions Appendix 2
May., 2002	SH (NA)-080120-H	Partial corrections Section 3.1, Section 3.2, Appendix 1 Partial additions Section 2.1.1, Section 2.2.1, Section 2.2.2
Jun., 2004	SH (NA)-080120-I	Partial corrections Manuals MODEL CODE change Changed from 13JU09 to 1DM191

Japanese Manual Version SH-080115-J

This manual confers no industrial property rights or any rights of any other kind, nor does it confer any patent licenses. Mitsubishi Electric Corporation cannot be held responsible for any problems involving industrial property rights which may occur as a result of using the contents noted in this manual.

## INTRODUCTION

Thank you for choosing the Mitsubishi Graphic Operation Terminal.  
Before using the equipment, please read this manual carefully to use the equipment to its optimum.

## CONTENTS

About manuals .....	A- 6
Abbreviations and generic terms in this manual .....	A- 7
<b>1. OVERVIEW</b> .....	<b>1- 1 to 1- 2</b>
1.1 Features .....	1- 1
<b>2. SYSTEM CONFIGURATION</b> .....	<b>2- 1 to 2- 6</b>
2.1 System Configuration at Installation of GT Simulator .....	2- 1
2.1.1 System configuration.....	2- 1
2.1.2 Operation environment.....	2- 1
2.2 System Configuration for GT Simulator Execution .....	2- 3
2.2.1 System configuration.....	2- 3
2.2.2 Applicable CPUs .....	2- 5
2.2.3 About the converter/cable .....	2- 6
<b>3. SPECIFICATIONS</b> .....	<b>3- 1 to 3-14</b>
3.1 Specifications of the GOTs Simulated.....	3- 1
3.2 Functions that cannot be simulated.....	3- 1
3.3 Restrictions on and Instructions for use of GT Simulator .....	3- 3
3.3.1 Restrictions on and instructions for GT simulator .....	3- 3
3.3.2 Restrictions on and instructions for GX Simulator .....	3- 5
3.3.3 Restrictions on and instructions for PLC CPU connection .....	3- 6
3.4 Device Ranges That Can Be Monitored.....	3- 7
<b>4. SCREEN CONFIGURATION OF GT SIMULATOR</b> .....	<b>4- 1 to 4- 2</b>
4.1 Screen Configuration and Various Tools of GT Simulator .....	4- 1
4.2 Menu Configuration.....	4- 2
<b>5. GT SIMULATOR OPERATING METHOD</b> .....	<b>5- 1 to 5- 9</b>
5.1 Simulation Procedure Outline .....	5- 1
5.2 Option Setting.....	5- 3
5.2.1 Description of the option setting dialog box.....	5- 4
5.3 Execution of simulation .....	5- 5
5.4 Opening the Project .....	5- 6
5.4.1 Description of the monitor data reading dialog box.....	5- 7
5.5 Simulating Operation .....	5- 8
5.6 Exiting from GT Simulator .....	5- 9

<b>6. FUNCTIONS OF GT SIMULATOR</b>	<b>6- 1 to 6- 2</b>
-------------------------------------	---------------------

6.1 Snap Shot Function .....	6- 1
6.1.1 Operating procedure .....	6- 1
6.2 Print Function .....	6- 2
6.2.1 Operating procedure .....	6- 2
6.2.2 Print preview .....	6- 2
6.2.3 Page setup .....	6- 2

<b>7. DEVICE MONITOR FUNCTIONS</b>	<b>7- 1 to 7-17</b>
------------------------------------	---------------------

7.1 Overview.....	7- 1
7.2 Restrictions on and instructions for use of Device Monitor.....	7- 2
7.3 Screen Configuration of Device Monitor .....	7- 3
7.3.1 Screen Configuration and Various Tools of Device Monitor.....	7- 3
7.3.2 Menu Configuration.....	7- 7
7.4 How to Operate the Device Monitor Function .....	7- 8
7.5 Device Monitoring Functions .....	7-10
7.5.1 Sort function .....	7-10
7.5.2 Device value edit function .....	7-10
7.5.3 Device registration function.....	7-12
7.5.4 Function to display all Device Monitor screens together .....	7-13
7.6 Various Settings .....	7-14
7.6.1 How to display the setting dialog box .....	7-14
7.6.2 Settings and setting methods .....	7-15

<b>8. TROUBLESHOOTING</b>	<b>8- 1 to 8- 3</b>
---------------------------	---------------------

<b>APPENDICES</b>	<b>APP- 1 to APP- 8</b>
-------------------	-------------------------

Appendix 1 Examples of using GT Simulator.....	APP- 1
Appendix 1.1 Simulating the sample monitor data.....	APP- 1
Appendix 1.2 Making correction to the sample monitor data on GT Designer .....	APP- 4
Appendix 1.3 Simulating the sample monitor data corrected on GT Designer .....	APP- 6
Appendix2 List of Functions Added to Update GT Simulator .....	APP- 7

<b>INDEX</b>	<b>Index- 1 to Index- 2</b>
--------------	-----------------------------

## Manuals

The following manuals are relevant to this product.  
Refer to the following list and order the required manuals.

- Detailed manuals

Manual Name	Manual Number (Model Code)
A985GOT/A975GOT/A970GOT/A960GOT User's Manual Explains the specifications, general system configuration, component devices, part names, option unit loading methods, installation and wiring methods, maintenance and inspection methods, and error codes of A985GOT/A975GOT/A970GOT/A960GOT unit. <p style="text-align: right;">(Available as option)</p>	SH-4005 (1DM099)
A950GOT/A951GOT/A953GOT/A956GOT User's Manual Explains the specifications, general system configuration, component devices, part names, option unit loading methods, installation and wiring methods, maintenance and inspection methods, and error codes of A950GOT/A951GOT/A953GOT/A956GOT unit. <p style="text-align: right;">(Available as option)</p>	SH-080018 (1DM103)

- Relevant Manuals

For relevant manual, refer to the PDF manual stored within the drawing software.

Abbreviations and generic terms in this manual

Abbreviations and generic terms used in this manual are described as follows:

Abbreviations and generic terms		Description
GOT	A985GOT-V	Generic term of A985GOT-TBA-V and A985GOT-TBD-V
	A985GOT	Generic term of A985GOT-TBA, A985GOT-TBD and A985GOT-TBA-EU
	A975GOT	Generic term of A975GOT-TBA-B, A975GOT-TBD-B, A975GOT-TBA, A975GOT-TBD and A975GOT-TBA-EU
	A970GOT	Generic term of A970GOT-TBA-B A970GOT-TBD-B, A970GOT-TBA, A970GOT-TBD, A970GOT-SBA, A970GOT-SBD, A970GOT-LBA, A970GOT-LBD, A970GOT-TBA-EU and A970GOT-SBA-EU
	A97 *GOT	Generic term of A975GOT and A970GOT
	A960GOT	Generic term of A960GOT-EBA, A960GOT-EBD and A960GOT-EBA-EU
	A956GOT	Generic term of A956GOT-TBD, A956GOT-SBD, A956GOT-LBD, A956GOT-TBD-M3, A956GOT-SBD-M3 and A956GOT-LBD-M3
	A956WGOT	Abbreviation of A956WGOT-TBD
	A953GOT	Generic term of A953GOT-TBD, A953GOT-SBD, A953GOT-LBD, A953GOT-TBD-M3, A953GOT-SBD-M3 and A953GOT-LBD-M3
	A951GOT	Generic term of A951GOT-TBD, A951GOT-SBD, A951GOT-LBD, A951GOT-TBD-M3, A951GOT-SBD-M3 and A951GOT-LBD-M3
	A951GOT-Q	Generic term of A951GOT-QTBD, A951GOT-QSBD, A951GOT-QLBD, A951GOT-QTBD-M3, A951GOT-QSBD-M3 and A951GOT-QLBD-M3
	A950GOT	Generic term of A950GOT-TBD, A950GOT-SBD, A950GOT-LBD, A950GOT-TBD-M3, A950GOT-SBD-M3 and A950GOT-LBD-M3
	A950 handy GOT	Generic term of A953GOT-SBD-M3-H and A953GOT-LBD-M3-H
	A95 *GOT	Generic term of A956GOT, A956WGOT, A953GOT, A951GOT, A951GOT-Q, A950GOT and A950 handy GOT
	F940GOT	Generic term of F940GOT-SWD-E, F940GOT-LWD-E, ET-940BH(-L) and ET-940PH(-L)
	F930GOT	Abbreviation of F930GOT-BWD-E
	F940 handy GOT	Generic term of F940GOT-SBD-H, F940GOT-LBD-H, F943GOT-SBD-H and F943GOT-LBD-H
	F940WGOT	Abbreviation of F940WGOT-TWD
	F940GOT-RH	Generic term of F940GOT-SBD-RH, F940GOT-LBD-RH, F943GOT-SBD-RH, F943GOT-LBD-RH
	GOT-A900 series	Generic term of A985GOT-V, A985GOT, A975GOT, A970GOT, A960GOT, A95 *GOT and GT SoftGOT
GOT-F900 series	Generic term of F940WGOT, F940GOT-RH, F940GOT, F930GOT and F940 handy GOT	
Software	GT Works Version 5	Abbreviation of SW5D5C-GTWORKS-E software package
	GT Designer Version 5	Generic term of SW5D5C-GOTR-PACKE software package and SW5D5C-GOTR-PACKEV software package
	GT Designer	Abbreviation of image creation software GT Designer for GOT900
	GT Simulator	Abbreviation of GT Simulator screen simulator GOT900
	GT Converter	Abbreviation of data conversion software GT Converter for GOT900
	GT Debugger	Abbreviation of debugging software GT Debugger
	GT Manager	Abbreviation of GT Manager data editing software for GOT900
	GT SoftGOT	Abbreviation of GT SoftGOT monitoring software.
	GX Developer	Generic term of SW□D5C-GPPW-E/SW□D5F-GPPW-E software packages
	GX Simulator	Generic term of SW□D5C-LLT-E ladder logic test tool function software packages (SW5D5C-LLT-E or later)
CPU	QCPU (Q Mode)	Generic term of Q00JCPU, Q00CPU, Q01CPU, Q02CPU, Q02HCPU, Q06HCPU, Q12HCPU, Q25HCPU, Q12PHCPU and Q25PHCPU CPU units
	QCPU (A Mode)	Generic term of Q02CPU-A, Q02HCPU-A and Q06HCPU-A CPU units
	QCPU	Generic term of QCPU (Q Mode) and QCPU (A Mode)
	QnACPU (Large Type)	Generic term of Q2ACPU, Q2ACPU-S1, Q3ACPU, Q4ACPU and Q4ARCPU CPU units
	QnACPU (Small Type)	Generic term of Q2ASCPU, Q2ASCPU-S1, Q2ASHCPU and Q2ASHCPU-S1 CPU units
	QnACPU	Generic term of QnACPU (Large Type) and QnACPU (Small Type)
	AnUCPU	Generic term of A2UCPU, A2UCPU-S1, A3UCPU and A4UCPU CPU units
	AnACPU	Generic term of A2ACPU, A2ACPU-S1 and A3ACPU CPU units
	AnNCPU	Generic term of A1NCPU, A2NCPU, A2NCPU-S1 and A3NCPU CPU units
	ACPU (Large Type)	Generic term of AnUCPU, AnACPU and AnNCPU CPU units
	A2US(H)CPU	Generic term of A2USCPU, A2USCPU-S1 and A2USHCPU-S1 CPU units
	AnS(H)CPU	Generic term of A1SCPU, A1SHCPU, A2SCPU and A2SHCPU CPU units
	A1SJ(H)CPU	Generic term of A1SJCPU-S3 and A1SJHCPU CPU units
	ACPU (Small Type)	Generic term of A2US(H)CPU, AnS(H)CPU and A1SJ(H)CPU CPU units
	ACPU	Generic term of ACPU (Large Type), ACPU (Small Type) and A1FXCPU CPU units
	FXCPU	Generic term of FX0 series, FX0N series, FX0S series, FX1 series, FX1N series, FX1NC series, FX1S series, FX2 series, FX2C series, FX2N series, FX2NC series CPU unit
	Motion controller CPU	Generic term of A273UCPU, A273UHCPU, A273UHCPU-S3, A171SCPU-S3, A171SHCPUN, A172SHCPUN, A173UHCPU, A173UHCPU-S1 CPU unit
	FA controller	Generic term of LM610, LM7600, LM8000 CPU unit



Abbreviations and generic terms		Description
Other PLC	Omron PLC	Generic term of C200HS, C200H, C200HX, C200HG, C200HE, CQM1, C1000H, C2000H, CV500, CV1000, CV2000, CVM1-CPU11, CVM1-CPU21, CS1, CJ1 CPU unit
	Yasukawa PLC	Generic term of GL60S, GL60H, GL70H, GL120, GL130, CP-9200SH, CP-9300MS, MP-920, MP-930, MP-940, CP-9200(H) and PROGIC-8 CPU unit
	SLC500 Series	Generic term of SLC500-20, SLC500-30, SLC500-40, SLC5/01 SLC5/02, SLC5/03, SLC5/04 SLC5/05
	MicroLogix1000 Series	Generic term of 1761-L10BWA, 1761-L10BWB, 1761-L16AWA, 1761-L16BWA, 1761-L16BWB, 1761-L16BBB, 1761-L32AWA, 1761-L32BWA, 1761-L32BWB, 1761-L32BBB, 1761-L32AAA, 1761-L20AWA-5A, 1761-L20BWA-5A, 1761-L20BWB-5A
	MicroLogix1500 Series	Abbreviation of 1764-LSP
	Allen-Bradley PLC	Generic term of SLC 500 Series, MicroLogix1000 Series, MicroLogix1500 Series
	Sharp PLC	Generic term of JW-21CU, JW-22CU, JW-31CUH, JW-32CUH, JW-33CUH, JW-50CUH, JW-70CUH, JW-100CUH CPU unit
	PROSEC T Series	Generic term of T2(PU224 type), T2E, T2N, T3, T3H CPU unit
	PROSEC V Series	Abbreviation of Model3000(S3) CPU unit
	Toshiba PLC	Generic term of PROSEC T Series and PROSEC V Series
	SIEMENS PLC	Generic term of SIMATIC S7-300 Series and SIMATIC S7-400 Series CPU unit
	Large type H series	Generic term of H-302(CPU2-03H), H-702(CPU2-07H), H-1002(CPU2-10H), H-2002(CPU2-20H), H-4010(CPU3-40H), J-300(CPU-03Ha), H-700(CPU-07Ha), H-2000(CPU-20Ha)
	H200 to 252 Series	Generic term of H-200(CPU-02H, CPE-02H), H-250(CPU21-02H), H-252(CPU22-02H), H-252B(CPU22-02HB), H-252C(CPU22-02HC, CPE22-02HC)
	H Series board type	Generic term of H-20DR, H-28DR, H-40DR, H-64DR, H-20DT, H-28DT, H-40DT, H-64DT, HL-40DR, HL-64DR
	EH-150 Series	Generic term of EH-CPU104, EH-CPU208, EH-CPU308, EH-CPU316
	HITACHI PLC (HIDIC H Series)	Generic term of large type H series, H-200 to 252 Series H Series board type, EH-150 Series
Matsushita Electric Works PLC	Generic term of FP0-C16CT, FP0-C32CT, FP1-C24C, FP1-C40C, FP2, FP3, FP5, FP10(S), FP10SH, FP-M(C20TC) and FP-M(C32TC)	
Others	Memory	abbreviation of memory (flash memory) in the GOT
	OS	Abbreviation of GOT system software
	Object	Setting data for dynamic image
	Personal Computer	Personal computer where the corresponding software package is installed

\* In this manual, the following products are called by new names.

Old Name	New Name	Remarks
GPPW	GX Developer	Generic term of SW□D5C-GPPW-E/SW□D5F-GPPW-E software packages
LLT	GX Simulator	Generic term of SW□D5C-LLT-E ladder logic test tool function software packages (SW5D5C-LLT-E or later)

Chapter 1 OVERVIEW

This manual describes the system configuration, screen makeup, basic dialog box operation methods and others of the GT Simulator screen simulator for GOT (hereafter abbreviated to GT Simulator).

GT Simulator is designed to simulate GOT operations on a personal computer using the project data created on GT Designer.

POINT
<ul style="list-style-type: none"> <li>• For the installation method of GT Simulator, refer to the GT Works Version 5/GT Designer Version 5 Operating Manual (Start up Manual).</li> <li>• Refer to the help of GT Designer for object function settings, etc. when creating monitor screens on GT Designer.</li> </ul>


1.1 Features

(1) Simulation of GOT screen on personal computer

Simulating GOT operations on a personal computer enables you to debug monitor data if there is no GOT.


Since GT Designer can operate with GX Simulator to debug screens, installation of GX Simulator and GT Designer on the same personal computer allows operations from screen creation to screen debugging to be supported by a single personal computer.

Any correction made to a screen on GT Designer can be checked immediately on GT Simulator, improving design efficiency greatly.

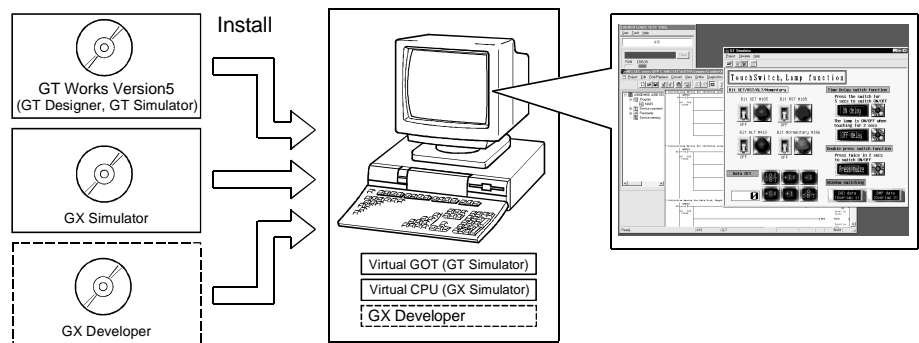

(2) Compatibility with special modules and network-compatible operating environment

Direct connection of a personal computer and PLC by a CPU allows monitoring and write operation debugging of special modules and on-network PLC which cannot be debugged by GX Simulator.

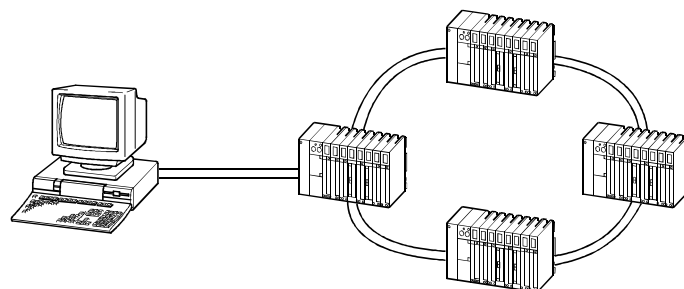


\* When GT Simulator is connected with the PLC CPU, monitoring speed is lower than when it is connected with GX Simulator.



## Chapter 2 SYSTEM CONFIGURATION

### 2.1 System Configuration at Installation of GT Simulator

#### 2.1.1 System configuration

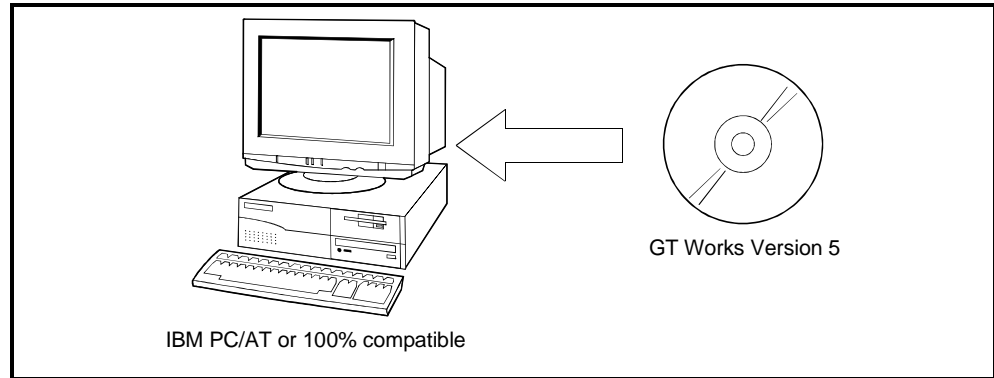

#### 2.1.2 Operation environment

The following table indicates the operating environment of the personal computer where GT Simulator is installed.

Item	Description
Body	Pentium <sup>®</sup> 133MHz or higher (Pentium II <sup>®</sup> 266MHz or higher recommended) Personal computer allowing operation of Microsoft <sup>®</sup> Windows <sup>®</sup> 95 operating system *2, Microsoft <sup>®</sup> Windows <sup>®</sup> 98 operating system, Microsoft <sup>®</sup> Windows <sup>®</sup> Millennium Edition operating system, Microsoft <sup>®</sup> WindowsNT <sup>®</sup> Workstation 4.0 operating system *3, Microsoft <sup>®</sup> Windows <sup>®</sup> 2000 Professional operating system
Disk drive	CD-ROM drive is mandatory.
Main memory	GT Simulator only : 32M bytes or more (96M bytes or more recommended) GT Simulator + GX Developer + GX Simulator: 64M bytes or more (96M bytes or more recommended)
Hard disk space	At the time of installation : 200M bytes or more At the time of operation : 50M bytes or more
CRT	Compatible with Windows <sup>®</sup> 95, Windows <sup>®</sup> 98, Windows <sup>®</sup> Me, WindowsNT <sup>®</sup> Workstation 4.0, Windows <sup>®</sup> 2000.
Display color	256 colors or more
Resolution	Resolution of 800x600 dots or more
Necessary software	Required SW4D5C-GOTR-PACKE Version A or later *4 When GX Simulator is used For QCPU (A mode), ACPU, Motion controller CPU simulation : SW5D5C-LLT-E Version A or later For QCPU (Q mode)(Except Q00J/Q00CPU/Q01CPU), QnACPU, FXCPU simulation : SW5D5C-LLT-E Version E or later For Q00J/Q00CPU/Q01CPU simulation : SW6D5C-LLT-E Version A or later For Q12PHCPU, Q25PHCPU simulation : SW6D5C-LLT-E Version L or later
Mouse, keyboard, printer, CD-ROM drive	Compatible with Windows <sup>®</sup> 95, Windows <sup>®</sup> 98, Windows <sup>®</sup> Me, WindowsNT <sup>®</sup> Workstation 4.0, Windows <sup>®</sup> 2000

\*1 When this software is used with GX Developer or GX Simulator, free space is required separately.

Refer to the GX Developer or GX Simulator Operating Manual (Start up Manual) for the free space required for use of GX Developer or GX Simulator.

\*2 When using GT Simulator, use a computer where Windows<sup>®</sup> 95 of version B or later or Internet Explorer 3 or later is installed.

\*3 When using GT Simulator, use a computer where WindowsNT<sup>®</sup> Workstation 4.0 of Service Pack 3 or later is installed.


\*4 Use GT Designer included in GT Works that contains GT Simulator.

**POINT**

Depending on the language of your Operating System, this software may not start. In such a case, start this software after setting the Regional Settings within Control Panel of Windows® to "English".

2.2 System Configuration for GT Simulator Execution

2.2.1 System configuration

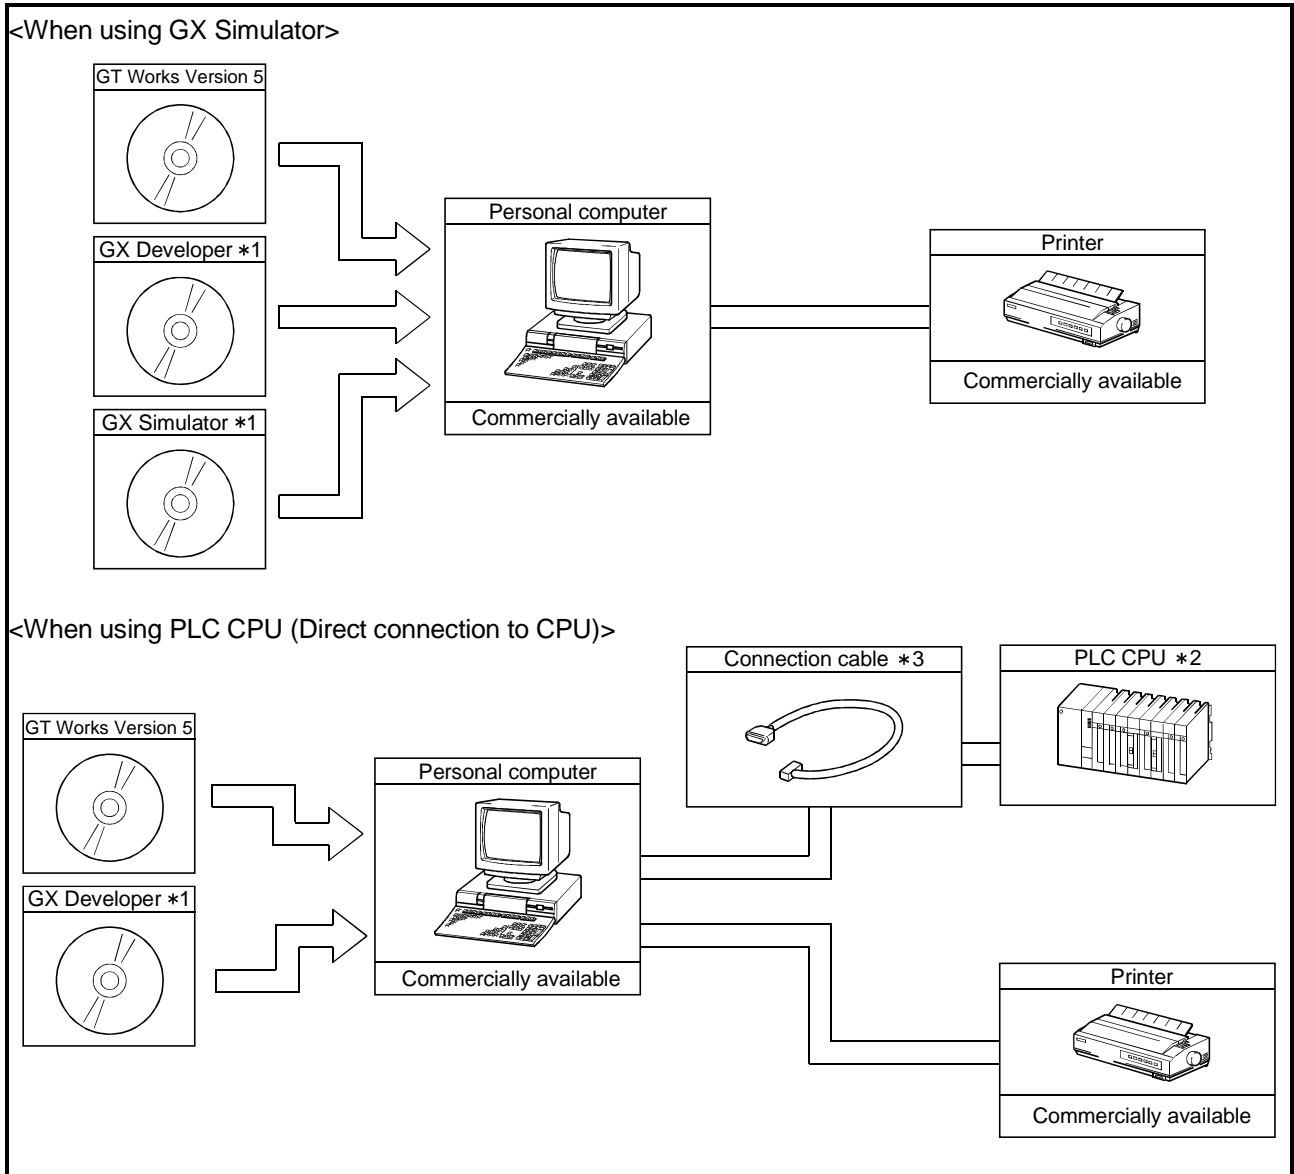

\*1 For how to install GX Developer and GX Simulator, refer to the GX Developer and GX Simulator Operating Manuals (Start up Manual).

\*2 Refer to Section 2.2 for usable PLC CPUs.

\*3 Refer to Section 2.3 for cables for connection of the personal computer and PLC CPU.

POINT
<ul style="list-style-type: none"><li>• About GX Simulator used Note that the version of GX Simulator used changes with the type of the CPU simulated. The following indicates the versions of GX Simulator usable with the CPUs. QCPU (A mode), ACPU, motion controller CPU : SW5D5C-LLT-E Version A or later QCPU (Q mode)(Except Q00J/Q00CPU/Q01CPU), QnACPU, FXCPU : SW5D5C-LLT-E Version E or later Q00J/Q00CPU/Q01CPU : SW6D5C-LLT-E Version A or later</li></ul>

2.2.2 Applicable CPUs

The following table indicates the PLC CPUs that may be connected to GT Simulator (personal computer).

Variety		Type	Connection form
MELSEC-QCPU	QCPU (Q Mode)	Q00JCPU, Q00CPU, Q01CPU, Q02CPU, Q02HCPU, Q06HCPU, Q12HCPU, Q25HCPU	Direct connection to CPU
	QCPU (A Mode)	Q02CPU-A, Q02HCPU-A, Q06HCPU-A	
MELSEC-QnACPU	QnACPU (Large type)	Q2ACPU (S1), Q2AHCPU (S1), Q3ACPU, Q4ACPU, Q4ARCPU	
	QnACPU (Small type)	Q2ASCPU (S1), Q2ASHCPU (S1)	
MELSEC-ACPU	ACPU (Large type)	A2UCPU (S1), A3UCPU, A4UCPU, A2ACPU (S1), A3ACPU, A1NCPU, A2NCPU (S1), A3NCPU (Version L or later for the one with link, version H or later for the one without link of AnN (S1))	
	ACPU (Small type)	A2USCPU (S1), A2USHCPU-S1, A1SCPU (S1), A1SHCPU, A2SCPU (S1) (Version C or later), A2SHCPU (S1), A1SJCPU, A1SJHCPU, A0J2HCPU (Version E or later)*5, A2CCPU (Version H or later) *5, A2CCPUC24, A2CJCPU *5, A1FXCPU	
Motion controller CPU		A171SCPU-S3*1, A171SHCPU*2, A172SHCPU*3, A173UHCPU (S1) *4, A273UHCPU*4	
MELSEC-FXCPU *5		FX0,FX0N, FX0S, FX1, FX1N, FX1S, FX2, FX2C, FX2N, FX2NC	

\*1 Monitoring is allowed in the A1SCPU range only.

\*2 Monitoring is allowed in the A1SHCPU range only.

\*3 Monitoring is allowed in the A2SHCPU range only.

\*4 Monitoring is allowed in the A3UCPU range only.

\*5 The clock display function is unusable.

\*6 When the monitor destination is a multiple PLC system, the following CPU can be monitored.

- For host station monitoring : Only the CPU connected to the personal computer can be monitored.
- For other station monitoring : Only the control PLC which controls the network module can be monitored.

<b>POINT</b>
<ul style="list-style-type: none"> <li>• About the clock display function Though the actual GOT reads and shows the clock data of the PLC CPU, GT Simulator displays the clock data of the personal computer, not the clock data of the PLC CPU.</li> </ul>




2.2.3 About the converter/cable

The following cables/converter have been confirmed by us that proper operation can be performed.



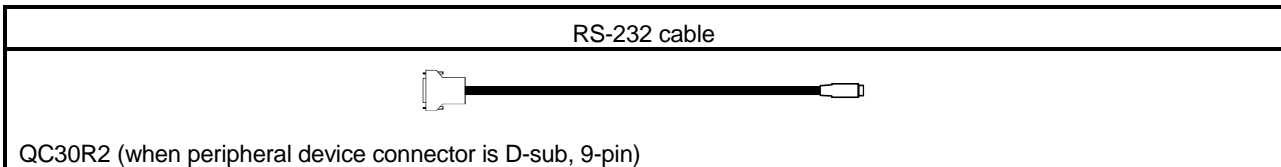

(1) QCPU

(a) Using the cable of Mitsubishi Electric make




(2) QnACPU, ACPU, Motion controller CPU, FXCPU

(a) Using the product of Mitsubishi Electric make

Peripheral Device Side (RS-232C cable)	RS-232C/RS-422 Converter	PLC CPU Side (RS-422 cable)
 F2-232CAB-1 (when peripheral device connector is D-sub, 9-pin)	 FX-232AW(C)	For ACPU, Motion controller CPU, QnACPU, FX1/FX2CPU/FX2cCPU  FX-422CAB (0.3m) FX-422CAB-150 (1.5m)
		For FX0/FX0s/FX0N/FX1s/FX1N/FX2N/FX2NC CPU  FX-422CABO (1.5m)

- When using the F2-232CAB or F2-232CAB-1 cable, use a compatible product. You cannot use an incompatible product. Check the type label indication on the cable to see if it is compatible or not.

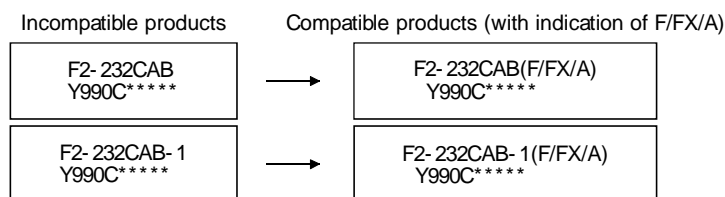

**REMARK**

The cables/converter used with GT Simulator are the same as the cables/converter used with GX Developer.

## Chapter 3 SPECIFICATIONS

### 3.1 Specifications of the GOTs Simulated

The following table indicates the specifications of the GOTs simulated on GT Simulator.

Name	Resolution (dots)	Display color	Extended memory	Connection form
GT SoftGOT	1280×1024	256 colors	8M	Direct connection to CPU
	1024×768			
	800×600			
	640×480			
A985GOT (-V)	800×600			
A97 *GOT	640×480			
A960GOT	640×400			
A956WGOT	480×234			
A95 *GOT *1	320×240			

\*1 Incompatible with the grip and operation switches of the A950 handy GOT.

\*2 The display section does not allow two points to be touched together.

\*3 Any GOT other than the above cannot be simulated.

POINT
<ul style="list-style-type: none"> <li>Though the actual GOTs differ in display colors between models, all GOTs simulated by GT Simulator show 256 colors. Make check on the display colors in "Preview" of GT Designer.</li> </ul>

### 3.2 Functions that cannot be simulated

Note that the following functions cannot be used on GT Simulator.

Function category	Function name
Object functions *1	Report function *3, Hard copy function *3 *4, Test function, Barcode function, Operation Panel function *5
Extension function *2	System monitor function *2 *3
Option functions *2	Ladder monitor function *5, Special unit monitor function, List editor function *5, Network monitor function *5, Motion monitor function *5, Servo amplifier monitor function
Other functions	Transparent function, Human sensor function, Brightness adjustment function, Sound function *4, VIDEO/RBG display function *6, Mail function Gateway function

\*1 For function details, refer to the GT Works Version 5/GT Designer Version 5 Reference Manual.

\*2 For function details, refer to the GOT-A900 Series Operating Manual (GT Works Version 5/GT Designer Version 5 compatible Extended •Option Functions Manual).

\*3 Can be used when simulating GT SoftGOT.

Stored as data into each folder within C:/Melsec/GSS.

(The hardcopy function can be used only when the output destination is set to the PC card.)

\*4 By using the GT Simulator snapshot and printing functions equivalent functions become possible.

\*5 By using GT Simulator and GX Developer together on the personal computer, equivalent functions become possible.

\*6 The video window is showed by blue color. (The video pictures are not showed)  
The RGB screen cannot be displayed.

(1) About utility functions

(a) About display of utility screen

GT Simulator does allow two points on the display section to be touched together.

To display the utility screen, therefore, you need to preset the touch key for displaying the utility screen at the time of screen creation.

(b) Usability of utility functions

When using the utility functions on GT Simulator, not that some functions are unusable.

The following table indicates whether the utility functions are usable or not on GT Simulator.

○: Usable ×: Unusable

Item	Usability
System monitor	×
Network monitor	×
List editor	×
Ladder monitor	×
Motion monitor	×
Special unit monitor	×
Servo amplifier monitor	×
Memory information	×
Screen & OS copy	×
Set up	○
Clock	×
Screen clean up	×
Password	○
Self-test	×
Brightness/contrast adjustment	×

POINT

- In the setup of the utility functions, some functions are inoperative if set.

The following table indicates whether they are operative or not on GT Simulator.

○: Operative △: Partly restricted ×: Inoperative

Item	Operability	Description
Buzzer volume	△	When Microsoft® Windows® 95 operating system/ Microsoft® Windows® 98 operating system/ Microsoft® Windows® Millennium Edition operating system is used, "LONG" and "SHORT" of the buzzer volume are not reflected.
Outside speaker	○	Operates.
Screen save time	×	May be set but does not function.
Screen save light	×	May be set but does not function.
Language	○	Operates.

### 3.3 Restrictions on and Instructions for use of GT Simulator

This section gives the restrictions on and instructions for use of GT Simulator.

#### 3.3.1 Restrictions on and instructions for GT simulator

##### (1) Monitor data that may be simulated

- GT Simulator can simulate only the monitor data whose GOT type has been set to the GOT-A900 series ("A985GOT", "A97\*GOT", "A960GOT", "A95\*GOT", "GT SoftGOT") on GT Designer.

The monitor data which has been created by setting the GOT type to the GOT-F900 series ("F940GOT", "F930GOT") on GT Designer can be simulated by changing the GOT type to the GOT-A900 series.

However, note that any functions the GOT-A9000 series is incompatible with cannot be converted.

When changing the GOT type, always back up the data.

Incompatible functions may not be converted at the time of GOT type changing, and the functions may not be converted properly when the GOT type is changed to the GOT-F900 series again.

- The monitor data created on GT Designer with the third party PLC set as the PLC type can be simulated by setting the ACPU as the CPU type in the option setting of GT Simulator only when GX Simulator is connected.  
Note that the device ranges that can be monitored differ from those of the GOT. (Refer to Section 3.4 for the device ranges that can be monitored on GT Simulator.)
- If you use on GT Simulator the monitor data of GT Designer of SW3D5C-GOTRE-PACK or earlier or the monitor data converted with GT Converter, proper operation may not be performed.  
The monitor data created with GT Designer of SW3D5C-GOTRE-PACK or earlier or the monitor data converted with GT Converter should be read once on GT Designer of SW4D5C-GOTR-PACKE or later and saved.

##### (2) Differences in display operation between GT Simulator and GOT

If 32-bit real number data has become unauthorized data for some reason, note that there are differences in display operation between GT Simulator and GOT.

##### (3) About drawing images

The drawing images of GT Simulator are matched with those of GT Designer. Hence, the display of GT Simulator may differ from that of the actual GOT.



### 3.3.2 Restrictions on and instructions for GX Simulator

- When GX Simulator was started from GT Simulator, GX Simulator cannot be started from GX Developer.  
When starting GX Simulator from GX Developer, exit from GT Simulator once, then restart GX Simulator from GX Developer.
- When GX Simulator started from GX Developer is used on GT Simulator, exit from GX Developer and GX Simulator after exiting from GT Simulator.  
Not that if you exit from GX Developer and GX Simulator first, GT Simulator will result in a communication error.
- Monitoring the buffer memory with GT Simulator requires I/O assignment to be made on GX Developer.  
When the default is specified in a GX Developer project at the time of GX Simulator connection, note that the buffer memory cannot be monitored since I/O assignment has not been made.  
When monitoring the buffer memory, specify the I/O-assigned project in the GX Developer project.
- When GX Simulator is used, the host station may only be monitored.  
Note that when another station is monitored using the station number switching function, another station is handled as the host.
- Use GT Simulator, GX Developer and GX Simulator of the same language.
- Note that the devices unsupported by GX Simulator can be used on GT Simulator.
- When access was made to any file register outside the range, GX Simulator can read "0" even outside the range. Hence, note this when using the recipe function for continuous read/write.

### 3.3.3 Restrictions on and instructions for PLC CPU connection

- GT Simulator supports only connections with the QnACPU, ACPU, motion controller CPU and FXCPU.  
It cannot be connected to third-party PLCs.  
Refer to Section 2.2.2 for connectable CPUs on GT Simulator.
- GT Simulator enables simulation for direct connection to CPU only.  
GT Simulator cannot be used to perform simulation for bus connection, computer link connection, MELSECNET connection, CC-Link connection and the like.
- When GT Simulator is connected with the PLC CPU, the monitor speed is lower than on the actual GOT.
- When connecting GT Simulator to FX0, FX0S, FX1, FX1S, FX2 or FX2C via 2PIF, use 2PIF of Ver 3.01A or later.
- When connecting GT Simulator to the function extension board of the FXCPU, you must make the following settings on the FXCPU side.
  - 1) On GX Developer, choose "PLC parameter"- "PLC System setting (2)" and click the checked "Communication setting" check box.
  - 2) Set "0" in device "D8120".
- When GT Simulator is connected to the QnACPU, note that any other station than the QnACPU cannot be monitored.  
The access ranges of the other network systems that can be monitored are the same as those of the GOT.

### 3.4 Device Ranges That Can Be Monitored

The following device ranges can be monitored on GT Simulator.

<b>POINT</b>
When GX Simulator is connected, the devices unsupported by GX Simulator cannot be monitored.

(1) For Q/QnA/A/FXCPU

The devices usable with the GOT can be monitored.

For details of the device ranges that may be set, refer to the GT Works Version 5/GT Designer Version 5 Reference Manual.

(2) For third party PLC (can be monitored only when GX Simulator is connected)

The device ranges which can be monitored differ from those usable with the GOT.

(The devices outside the ranges cannot be displayed properly by the device monitor function.)

The following device ranges can be monitored by the GT simulator.

(a) OMRON SYSMAC (Omron PLC)

Device name		Available range for monitoring with GOT	Available range for monitoring with GT Simulator
Bit device	I/O relay	.0000 to 614315	.0000 to 008115
	Internal auxiliary relay		
	Data link relay (LR)	LR00000 to LR19915	LR00000 to LR08155
	Auxiliary memory relay (AR)	AR00000 to AR95915	—
	Holding relay (HR)	HR00000 to HR51115	HR00000 to HR08115
	Internal holding relay (W)	WR00000 to WR51115	WR00000 to WR08115
	Timer contact (TIM)	TIM0000 to TIM2047	TIM0000 to TIM0255
	Counter contact (CNT)	CNT0000 to CNT2047	CNT0000 to CNT0255
	Data memory (DM)	DM00000 to DM99999	DM00000 to DM8191
	Timer (current value) (TIM)	TIM0 to TIM2047	TIM0000 to TIM0255
	Counter (current value) (CNT)	CNT0000 to CNT2047	CNT0000 to CNT0255
	GOT bit register (GB)	GB64 to GB1023	GB64 to GB1023
Word device	I/O relay	0000 to 6143	0000 to 0081
	Data link relay (LR)	LR000 to LR199	LR000 to LR031
	Auxiliary memory relay (AR)	AR000 to AR959	—
	Holding relay (HR)	HR000 to HR511	HR000 to HR081
	Internal holding relay (W)	WR000 to WR511	WR000 to WR081
	Data memory (DM)	DM0000 to DM99999	DM0000 to DM8191
	Timer (current value) (TIM)	TIM0000 to TIM2047	TIM0000 to TIM0255
	Counter (current value) (CNT)	CNT0000 to CNT2047	CNT0000 to CNT0255
	Extended data memory (EM current bank)	EM0000 to EM9999	—
	Extended data memory (EM banks 0 to 12)		
	GOT data register (GD)	GD64 to GD1023	GD64 to GD1023
	GOT special register (GS)	GS0 to GS511	GS0 to GS511



(b) Yasukawa PLC

1) YASUKAWA GL/PROGIC-8 (GL60S, GL60H, GL70H, GL120, GL130, PROGIC-8)

Device name		Available range for monitoring with GOT		Available range for monitoring with GT Simulator
		GL60S, GL60L, GL70H, GL120, GL130	PROGIC-8	
Bit device	Coil	O01 to O63424	O0001 to O2048	O01 to O08716 *1
	Input relay	I1 to I63424	I0001 to I0512	I1 to I08716 *2
	Link coil	D1 to D2048	D0001 to D1024	D1 to D2048
		D10001 to D12048 D20001 to D22048	—	—
GOT bit register	GB64 to GB1023	GB64 to GB1023	GB64 to GB1023	
Word device	Input register	Z1 to Z31840	Z0001 to Z0128	Z1 to Z8191, Z9000 to Z9255
	Holding register (W, SW)	W1 to W28291	W0001 to W2048	W1 to W8191
		SW1 to SW28291	SW1 to SW2048	—
	Link register (R, SR)	R1 to R2048	—	R1 to R2048
		R10001 to R12048 R20001 to R22048	R0001 to R1024	—
		SR1 to SR2048	SR1 to SR1024	—
		SR10001 to SR12048 SR20001 to SR22048		
	Constant register	K1 to K4096	—	K1 to K6
GOT data register	GD64 to GD1023	GD64 to GD1023	GD64 to GD1023	
GOT special register (GS)	GS0 to GS511	GS0 to GS511	GS0 to GS511	

\*1 O008717 to O08191 should not be used with GT Simulator because they are not shown correctly.

\*2 I008717 to I08191 should not be used with GT Simulator because they are not shown correctly.

2) YASUKAWA CP-9200SH/MP900Series (CP-9200SH, MP-920, MP-930, MP-940)

Device name		Available range for monitoring with GOT	Available range for monitoring with GT Simulator
Bit device	Coil	MB0 to MB4095F MB40960 to MB8191F MB245760 to MB28671F MB386720 to MB32767F	MB0 to MB511F
	Input relay	IB0000 to IBFFFF	IB0000 to IB1FFF
	GOT bit register	GB64 to GB1023	GB64 to GB1023
Word device	Input register	IW0 to IW7FFF	IW0 to IW1FFF
	Holding register	MW0 to MW32767	—
	GOT data register	GD64 to GD1023	GD64 to GD1023
	GOT special register (GS)	GS0 to GS511	GS0 to GS511

## 3) YASUKAWA CP-9200 (H)

Device name		Available range for monitoring with GOT	Available range for monitoring with GT Simulator
Bit device	Coil	OB00000 to OB007FF	OB00000 to OB007FF
	Input relay	IB00000 to IB007FF	IB00000 to IB007FF
	GOT bit register	GB64 to GB1023	GB64 to GB1023
Word device	Input register	IW00000 to IW007F	—
	Output register	OW0000 to OW007F	—
	Data register	DW0000 to DW02047	—
		ZD0000 to ZD02047	ZD0000 to ZD00006
	Common register	MW0000 to MW7694	—
	GOT data register	GD64 to GD1023	GD64 to GD1023
GOT special register (GS)	GS0 to GS511	GS0 to GS511	

## 4) YASKAWA CP-9300MS (CP-9300MC incompatible)

Device name		Available range for monitoring with GOT	Available range for monitoring with GT Simulator
Bit device	Coil	MB0 to MB3071F	MB0 to MB511F
	Input relay	IB0000 to IB3FF	IB0000 to IB1FFF
	GOT bit register	GB64 to GB1023	GB64 to GB1023
Word device	Input register	IW0 to IW3F	IW0 to IW1FFF
	Holding register	MW0 to MW3071	MW0 to MW8191
	GOT data register	GD64 to GD1023	GD64 to GD1023
	GOT special register (GS)	GS0 to GS511	GS0 to GS511

## 5) YASKAWA CP-9300MS (CP-9300MC compatible)

Device name		Available range for monitoring with GOT	Available range for monitoring with GT Simulator
Bit device	Coil	OB0 to OB1023	OB0 to OMB1023
	Input relay	IB0000 to IB1023	IB0000 to IB1023
	GOT bit register	GB64 to GB1023	GB64 to GB1023
Word device	Input register	I0 to I63	—
	Holding register	M0 to M2047	—
	GOT data register	GD64 to GD1023	GD64 to GD1023
	GOT special register (GS)	GS0 to GS511	GS0 to GS511

(c) Allen-Bradley PLC  
1) AB SLC500 (SLC500 series)

Device name		Available range for monitoring with GOT	Available range for monitoring with GT Simulator
Bit device	Bit (B)	B3:0/0 to B3:255/15, B10:0/0 to B255:255/15	—
	Timer (timing bit) (TT)	T4:0/14 to T4:255/14, T4:0/TT to T4:255/TT, T10:0/14 to T255:255/14, T10:0/TT to T255:255/TT	—
	Timer (completion bit) (TN)	T4:0/13 to T4:255/13, T4:0/DN to T4:255/DN, T10:0/13 to T255:255/13, T10:0/DN to T255:255/DN	—
	Counter (up counter) (CU)	C5:0/15 to C5:255/15, C5:0/CU to C5:255/CU C10:0/15 to C255:255/15, C10:0/CU to C255:255/CU	—
	Counter (down counter) (CD)	C5:0/14 to C5:255/14, C5:0/CD to C5:255/CD C10:0/14 to C255:255/14, C10:0/CD to C255:255/CD	—
	Counter (completion bit) (CN)	C5:0/13 to C5:255/13, C5:0/DN to C255:255/DN, C10:0/13 to C255:255/13, C10:0/DN to C255:255/DN	—
	Integer (N)	N7:0 to N7:255, N10:0 to N255:255	—
	Word device bit	Designated bit of the following word devices	Specified bit of any of the following word devices
	GOT internal bit register (GB)	GB64 to GB1023	GB64 to GB1023
Word device	Bit (B)	B3:0 to B3:255	—
	Timer (set value) (TP)	T4:0.1 to T4:255.1, T4:0.PRE to T4:255.PRE, T10:0.1 to T255:255.1, T10:0.PRE to T255:255.PRE	—
	Timer (current value) (TA)	T4:0.2 to T4:255.2, T4:0.ACC to T4:255.ACC, T10:0.2 to T255:255.2, T10:0.ACC to T255:255.ACC	—
	Counter (set value) (CP)	C5:0.1 to C5:255.1, C5:0.PRE to C5:255.PRE, C10:0.1 to C255:255.1, C10:0.PRE to C255:255.PRE	—
	Counter (current value) (CA)	C5:0.2 to C5:255.2, C5:0.ACC to C5:255.ACC, C10:0.2 to C255:255.2, C10:0.ACC to C255:255.ACC	—
	Integer (N)	N7:0 to N7:255, N10:0 to N255:255	—
	GOT internal data register (GD)	GD64 to GD1023	GD64 to GD1023
	GOT special register (GS)	GS0 to GS511	GS0 to GS511

2) AB Micrologix1000/1500 series

Device name		Available range for monitoring with GOT		Available range for monitoring with GT Simulator
		Micrologix1000 series	Micrologix1500 series	
Bit device	Bit (B)	B3:0/0 to B3:31/15	B3:0/0 to B255:255/15	—
	Timer (timing bit) (TT)	T4:0/14 to T4:39/14 T4:0/TT to T4:39/TT	T3:0/14 to T255:255/14 T3:0/TT to T255:255/TT	—
	Timer (completion bit) (TN)	T4:0/13 to T4:39/13 T4:0/DN to T4:39/DN	T3:0/13 to T255:255/13 T3:0/DN to T255:255/DN	—
	Counter (up counter) (CU)	C5:0/15 to C5:31/15 C5:0/CU to C5:31/CU	C3:0/15 to C255:255/15 C3:0/CU to C255:255/CU	—
	Counter (down counter) (CD)	C5:0/14 to C5:31/14 C5:0/CD to C5:31/CD	C3:0/14 to C255:255/14 C3:0/CD to C255:255/CD	—
	Counter (completion bit) (CN)	C5:0/13 to C5:31/13 C5:0/DN to C5:31/DN	C3:0/13 to C255:255/13 C3:0/DN to T255:255/DN	—
	Integer (N)	N7:0 to N7:104	N3:0 to N255:255	—
	Word device bit	Designated bit of the following word devices	Designated bit of the following word devices	Designated bit of the following word devices
	GOT internal bit register (GB)	GB64 to GB1023	GB64 to GB1023	GD64 to GD1023
Word device	Bit (B)	B3:0 to B3:31	B3:0 to B255:255	—
	Timer (set value) (TP)	T4:0.1 to T4:39.1 T4:0.PRE to T4:39.PRE	T3:0.1 to T255:255.1 T3:0.PRE to T255:255.PRE	—
	Timer (current value) (TA)	T4:0.2 to T4:39.2 T4:0.ACC to T4:39.ACC	T3:0.2 to T255:255.2 T3:0.ACC to T255:255.ACC	—
	Counter (set value) (CP)	C5:0.1 to C5:39.1 C5:0.PRE to D5:39.PRE	C3:0.1 to C255:255.1 C3:0.PRE to C255:255.PRE	—
	Counter (current value) (CA)	C5:0.2 to C5:31.2 C5:0.ACC to C5:31.ACC	C3:0.2 to C255:255.2 C3:0.ACC to C255:255.ACC	—
	Integer (N)	N7:0 to N7:14	N3:0 to N255:255	—
	GOT internal data register (GD)	GD64 to GD1023	GD64 to GD1023	GD64 to GD1023
	GOT special register (GS)	GS0 to GS511	GS0 to GS511	GS0 to GS511

## (d) SHARP JW (Sharp PLC)

Device name	Available range for monitoring with GOT	Available range for monitoring with GT Simulator
I/O relay	0 to 15777 20000 to 75777	0 to 15777
Timer counter (contact)	T/C0000 to T/C1777	T/C0000 to T/C0377
Timer counter (current value)	T/C0000 to T/C1777 (b0000 to b3776)	T/C0000 to T/C1777 (b0000 to b3776)
Register	09000 to 09776 19000 to 19776 29000 to 29776 39000 to 39776 49000 to 49776 59000 to 59776 69000 to 69776 79000 to 79776 89000 to 89776 99000 to 99776 E0000 to E0776 E1000 to E1776 E2000 to E2776 E3000 to E3776 E4000 to E4776 E5000 to E5776 E6000 to E6776 E7000 to E7776	09000 to 09776 19000 to 19776 29000 to 29776 39000 to 39776 49000 to 49776 59000 to 59776 69000 to 69776 79000 to 79776 89000 to 89776 99000 to 99776 E0000 to E0776 E1000 to E1776 E2000 to E2776 E3000 to E3776 E4000 to E4776 E5000 to E5776 — E7000 to E7776
File register	1000000 to 1177776 2000000 to 2177776 3000000 to 3177776 4000000 to 4177776 5000000 to 5177776 6000000 to 6177776 7000000 to 7177776	— 2000000 to 2177776 3000000 to 3177776 4000000 to 4177776 5000000 to 5177776 6000000 to 6177776 7000000 to 7177776

(e) TOSHIBA PROSEC T/V (Toshiba PLC)

Device name	Available range for monitoring with GOT		Available range for monitoring with GT Simulator	
	PROSEC T Series	PROSEC V Series		
Bit device	External input (X)	X0000 to X511F	—	X0000 to X511F
	External output (Y)	Y0000 to Y511F	—	Y0000 to Y511F
	Internal relay (R)	R0000 to R999F	—	R0000 to R4095F
	Data register	—	R00000 to R4095F	
	Special relay (S)	S0000 to S255F	—	—
	Special register	—	S0000 to S511F	Z0000 to Z511F
	Link register relay (Z)	Z0000 to Z999F	—	
	Link relay (L)	L0000 to L255F	—	—
	Timer (contact) (T)	T000 to T999	—	T000 to T255
	Counter (contact) (C)	C000 to C511	—	C000 to C255
	Word device bit	Designated bit of the following word devices (except timer (current value) and counter (current value))	Specified bit of any of the following word devices (Except data register (R))	Designated bit of the following word devices (except timer (current value) and counter (current value))
	GOT bit register (GB)	GB64 to GB1023	GB64 to GB1023	GB64 to GB1023
Word device	External input (X)	XW000 to XW511	—	XW000 to XW511
	External output (Y)	YW000 to YW511	—	YW000 to YW511
	Internal relay (R)	RW000 to RW999	—	RW000 to RW511
	Data register(R)	—	RW000 to RW4095	
	Special relay (S)	SW000 to SW255	SW000 to SW511	—
	Link register relay (Z)	—	—	—
	Link relay (L)	LW000 to LW255	—	—
	Timer (current value) (T)	T000 to T999	—	T000 to T255
	Counter (current value) (C)	C000 to C511	—	C000 to C255
	Data register (D)	D0000 to D8191	D0000 to D4095	D0000 to D8191
	Link register (W)	W0000 to W2047	—	W0000 to W2047
	File register (F)	F0000 to F32467	—	F0 to F8191
	Bit device word	Conversion of the above bit devices to words (except link register relay, timer (contact) and counter (contact)) GOT data register (GD)	Conversion of any of the above bit devices into word	Conversion of the above bit devices to words (except link register relay, timer (contact) and counter (contact)) GOT data register (GD)
	GOT data register (GD)	GD64 to GD1023	GD64 to GD1023	GD64 to GD1023
GOT special register (GS)	GS0 to GS511	GS0 to GS511	GS0 to GS511	

(f) SIEMENS S7-300/400 (SIEMENS PLC)

Device name		Available range for monitoring with GOT		Available range for monitoring with GT Simulator
		SIEMENS S7-300 series	SIEMENS S7-400 Series	
Bit device	Input relay	I0000 to I1277	I0000 to I5117	I0000 to I1277
	Output relay	Q0000 to Q1277	Q0000 to Q5117	Q0000 to Q1277
	Bit memory	M0000 to M2557	M00000 to M20477	M0000 to M10237
	GOT bit register	GB64 to GB1023	GB64 to GB1023	GB64 to GB1023
Word device	Input relay	IW000 to IW126	IW000 to IW510	IW000 to IW126
	Output relay	QW000 to QW126	QW000 to QW510	QW000 to QW126
	Bit memory	MW000 to MW254	MW0000 to MW2046	MW000 to MW1022
	Timer (present value)	T000 to T127	T000 to T511	T000 to T255
	Counter (present value)	C00 to C63	C000 to C511	C00 to C255
	Data register	D000100000 to D000108190 D000200000 to D000208190 D000300000 to D000308190 • • • D012600000 to D012608190 D012700000 to D012708190	D000100000 to D000165534 D000200000 to D000265534 D000300000 to D000365534 • • • D409400000 to D409465534 D409500000 to D409565534	—
	GOT data register	GD64 to GD1023	GD64 to GD1023	GD64 to GD1023
	GOT special register (GS)	GS0 to GS511	GS0 to GS511	GS0 to GS511

(g) MEWNET Series (Matsushita Electric Works PLC)

Device name		Available range for monitoring with GOT	Available range for monitoring with GT Simulator
Bit device	Input relay (X)	X0000 to X511F	X0000 to X511F
	Output relay (Y)	Y0000 to Y511F	Y0000 to Y511F
	Internal relay (R)	R0000 to R886F	R0000 to R511F
	Link relay (L)	L0000 to L639F	L0000 to L511F
	Special relay (R)	R9000 to R910F	R9000 to R910F
	Timer contact (T)	T0000 to T3071	T0000 to T0255
	Counter contact (C)	C0000 to C3071	C0000 to C0255
	GOT bit register (GB)	GB64 to GB1023	GB64 to GB1023
Word device	Input relay (WX)*1	WX000 to WX511	WX000 to WX511
	Output relay (WY)*1	WY0000 to WY511	WY0000 to WY511
	Internal relay (WR)*1	WR000 to WR886	WR000 to WR511
	Link relay (WL)*1	WL000 to WL639	WL000 to WL511
	Special relay (WR)*1	WR900 to WR910	WR900 to WR910
	Timer/counter (elapsed value)(EV)	EV0000 to EV3071	EV0000 to EV0255
	Counter contact (set value)(SV)	SV0000 to SV3071	—
	Data register (DT)	DT00000 to DT10239	DT00000 to DT08191
	Link register (LD)	LD0000 to LD8447	LD0000 to LD8191
	File register (FL)	FL00000 to FL32764	—
GOT data register (GD)	GD64 to GD1023	GD64 to GD1023	
GOT special register (GS)	GS0 to GS511	GS0 to GS511	

\*1 Set the device number as a multiple of 16.


## (h) HITACHI HIDIC H (Hitachi PLC)

Device name		Available range for monitoring with GOT	Available range for monitoring with GT Simulator
Bit device	External input (X)	X00000 to X05A95	X00000 to X05A95
	External output (Y)	Y00000 to Y05A95	Y00000 to Y05A95
	Remote external input (X)	X10000 to X49995	—
	Remote external output (Y)	Y10000 to Y49995	—
	First CPU link (L)	L0000 to L3FFF	L0000 to L1FFF
	Second CPU link (L)	L10000 to L13FFF	—
	Data area (M)	M0000 to M3FFF	M0000 to M1FFF
	On-delay timer (TD)	TD000 to TD255	TD000 to TD255
	Single-shot timer (SS)	SS000 to SS255	—
	Watchdog timer (WDT)	WDT000 to WDT255	—
	Monostable timer (MS)	MS000 to MS255	—
	Retentive timer (TMR)	TMR000 to TMR255	—
	Up counter (CU)	CU000 to CU511	CU000 to CU511
	Ring counter (RCU)	RCU000 to RCU511	—
	Up/down counter (CT)	CT000 to CT511	—
	Bit internal output (R)	R000 to R7BF	—
	DIF (leading edge detection)	DIF000 to DIF511	—
	DFN (trailing edge detection)	DFN000 to DFN511	—
	GOT bit register	GB64 to GB1023	GB64 to GB1023
Word device	External input (WX)	WX0000 to WX05A7	—
	External output (WY)	WY0000 to WY05A7	—
	Remote external input (WX)	WX1000 to WX4997	—
	Remote external output (WY)	WY1000 to WY4997	—
	First CPU link (WL)	WL000 to WL3FF	WL0 to WL1FF
	Second CPU link (WL)	WL1000 to WL13FF	—
	Data area (WM)	WM000 to WM3FF	WM0 to WM1FF
	Timer/counter (elapsed value)(TC)	TC000 to TC511	TC000 to TC255
	Word internal output (WR)	WR000 to WR3FF	WR000 to WR3FF
	GOT data register	GD64 to GD1023	GD64 to GD1023
	GOT special register (GS)	GS0 to GS511	GS0 to GS511

Chapter 4 SCREEN CONFIGURATION OF GT SIMULATOR

4.1 Screen Configuration and Various Tools of GT Simulator

This section describes configuration and various tools of GT Simulator.

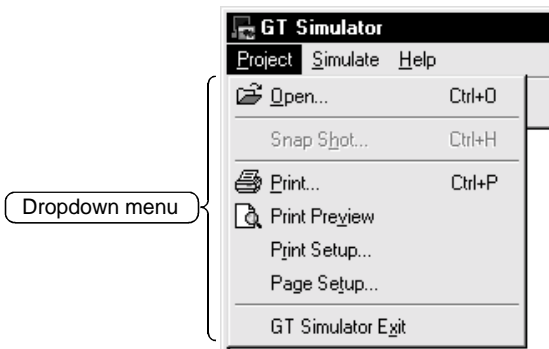

\*1 For the explanations of the title bar, menu bar and drop-down menu, refer to the GT Works Version 5/GT Designer Version 5 Reference Manual.



(1) Tool bar

Items allocated on the menu bar are displayed in buttons.

Move the cursor to the tool button and click it. The function starts.

- 1) 2) 3) 4) 5)



Tool button names

Number	Name	Description
1)	Open	Opens the project data created on GT Designer.
2)	Start	Starts simulation.
3)	Stop	Ends simulation.
4)	Device Monitor	Starts the device monitor function.
5)	Option	Sets the option functions.

4.2 Menu Configuration

This section lists and describes the commands assigned to the menu bar.


- Project
  - Open . . . . . Chooses the project data created on GT Designer and reads the monitor data.
  - Snap Shot . . . . . Saves the monitor data being simulated into any file in BMP format.
  - Print . . . . . Prints the monitor data being simulated.
  - Print Preview . . . . . Shows the printing image.
  - Print Setup . . . . . Sets the printer.
  - Page Setup . . . . . Sets the page.
  - GT Simulator Exit . . . . . Exits from GT Simulator.
- Simulate
  - Start . . . . . Starts simulation on GT Simulator.
  - Stop . . . . . Exits from GT Simulator.
  - Option . . . . . Sets simulated GOT type, connection method, etc.
- Tool
  - Start/End of Device Monitor . . . . . Starts/Ends the device monitor function.
- Help
  - About GT Simulator . . . . . Shows the software version of GT Simulator installed.
  - MELFANSweb . . . . . Connects to MELFANSweb.

Chapter 5 GT SIMULATOR OPERATING METHOD

5.1 Simulation Procedure Outline

This section shows a rough procedure for operating GT Simulator.


(1) When connecting GT Simulator and GX Simulator

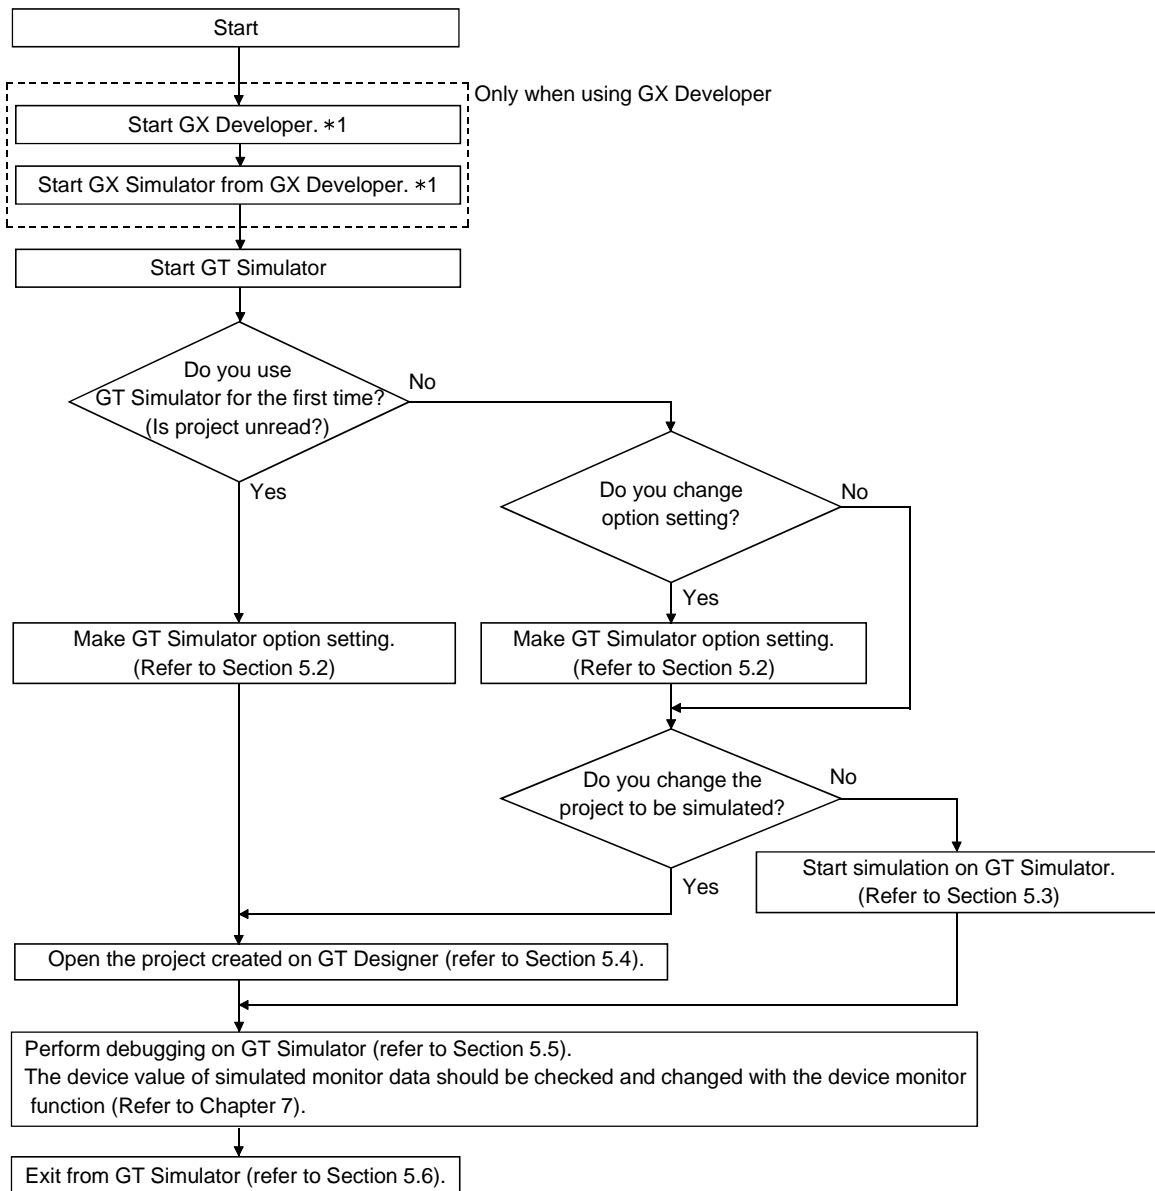

\*1 Refer to the GX Developer and GX Simulator Operating Manuals (Start up Manual) for the way to start GX Developer and GX Simulator.

\*2 When GX Developer is not used, GX Simulator is automatically started at the time of simulation execution on GT Simulator.

## (2) When connecting GT Simulator and PLC CPU

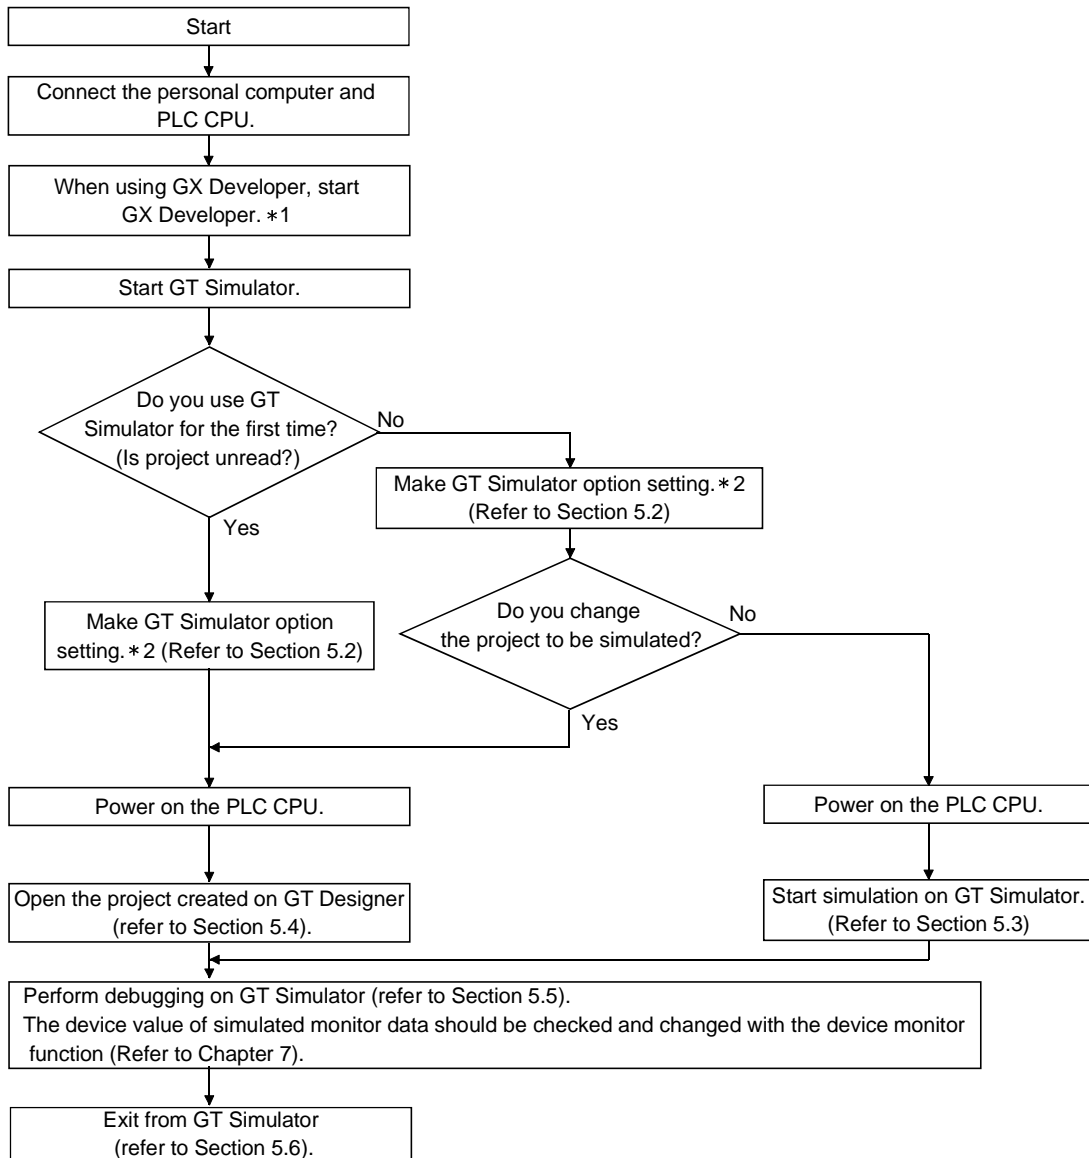

\*1 Refer to the GX Developer or GX Simulator Operating Manual (Start up Manual) for the way to start GX Developer.

\*2 The connection method in Option setting returns to GX Simulator when you exit from GT Simulator.

Every time you connect GT Simulator to the PLC CPU, choose [CPU] in the connection method of Option setting.

## 5.2 Option Setting


In Option setting, set the GOT type to be simulated on GT Simulator, GT Simulator connection method, used sequence program and others.

**POINT**

- When changing option setting before start of simulation on GT Simulator, you must exit from GT Simulator once.  
Make option setting before starting simulation.




- 1) When making option setting, choose any of the following.
  - "Simulate" - "Option"
  - "Option" on toolbar
  - "Option" by right-clicking the mouse

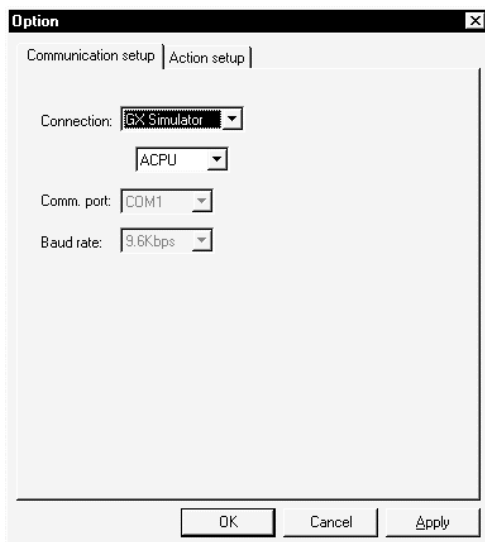

- 2) As the Option setting dialog box appears, make settings. (Refer to Section 5.2.1.)  
After setting, press  to update the information.  
Clicking the  button closes the dialog box.

5.2.1 Description of the option setting dialog box

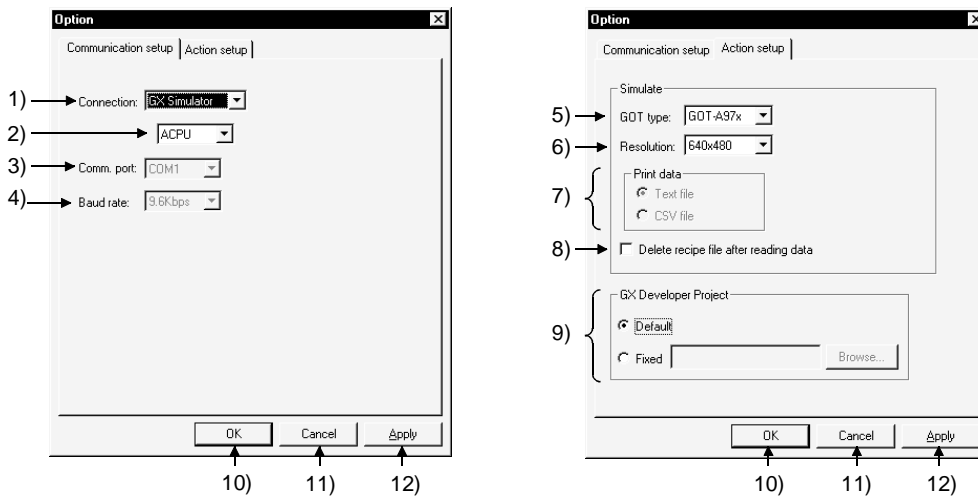


Number	Item	Description
1)	Connection	"GX Simulator" : Simulation is performed using GX Simulator installed in the personal computer. "CPU" : Simulation is performed with GT Simulator actually connected with the PLC. (Defaults to "GX Simulator".)
2)	—	Choose the type of the PLC CPU connected. "ACPU" : Choose when making connection with the ACPUs. "QnA" : Choose when making connection with the QnACPU. "QCPU" : Choose when making connection with the QCPU (Q mode). "QCPU-A" : Choose when making connection with the QCPU (A mode). "FX" : Choose when making connection with the FXCPU.
3)	Comm port	When you selected "CPU" in the connection method, choose the communication port on the personal computer side. "COM1", "COM2", "COM3", "COM4", "COM5", "COM6" (Defaults to "COM1".)
4)	Baud rate	When you selected "CPU" in the connection method, set the transmission speed to/from the CPU. When "ACPU" or "FXCPU" was selected : "9600bps" When "QnACPU" was selected : "9600bps", "19200bps", "38400bps" (Defaults to "19200bps".) When "QCPU" or "QCPU-A" was selected: "9600bps", "19200bps", "38400bps", "57600bps", "115200bps" (Defaults to "19200bps".)
5)	GOT type	Choose the type of the GOT to be simulated. "GOT-A950" : Simulation is performed as A950GOT (320 x 240 dots) "GOT-A956W" : Simulation is performed as A956WGOT (480 x 234 dots) "GOT-A960" : Simulation is performed as A960GOT (640 x 400 dots) "GOT-A97*" : Simulation is performed as A97*GOT (640 x 480 dots) "GOT-A985" : Simulation is performed as A985GOT (-V) (800 x 600 dots) "SoftGOT" : Simulation is performed as GT SoftGOT. (Defaults to "GOT-A97*".)
6)	Resolution	If "SoftGOT" is selected for GOT type, select (Resolution: dot) for screen size. If another GOT is selected, the resolution is fixed. "640 x 480", "800 x 600", "1024 x 768", "1280 x 1024" (Default is "640 x 480")
7)	Print data	If "SoftGOT" is selected for GOT type, select the data format for data saved in the "Memcard" folder by the alarm history function or other functions. "Text file" : Data is saved as a Text file. "Resolution CSV file" : Data is saved as a CSV file (Default is "Text file")
8)	Delete recipe file after reading data	Turn on this check box to delete the recipe data in the MemCard folder after monitor data reading.
9)	GX Developer project	Set the sequence program to be used. Default : Simulation is performed with the sequence program having only the END instruction. Fixed : Set any sequence program. Click the [Browse] button and choose the GX Developer project.
10)	OK	Used to update the settings and close the dialog box.
11)	Cancel	Used to cancel the settings and close the dialog box.
12)	Apply	Used to update the settings.

\* Connection returns to "GX Simulator" when you exit from GT Simulator.

Every time you connect GT Simulator to the PLC CPU, choose [CPU] in the connection method of Option setting.

5.3 Execution of simulation

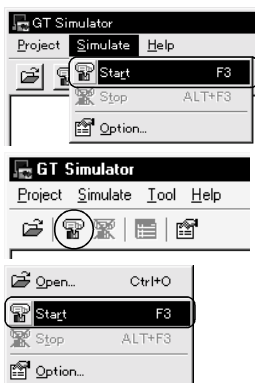


- 1) To start simulation, choose any of the following.
  - "Simulate" - "Start"
  - "Start of Simulation" on toolbar
  - "Start" by right-clicking the mouse

<When GX Simulator is connected> <When CPU is connected>



- 2) The left dialog box appears. The message displayed changes with the connection method in Option setting. Choose  or  to transfer data.

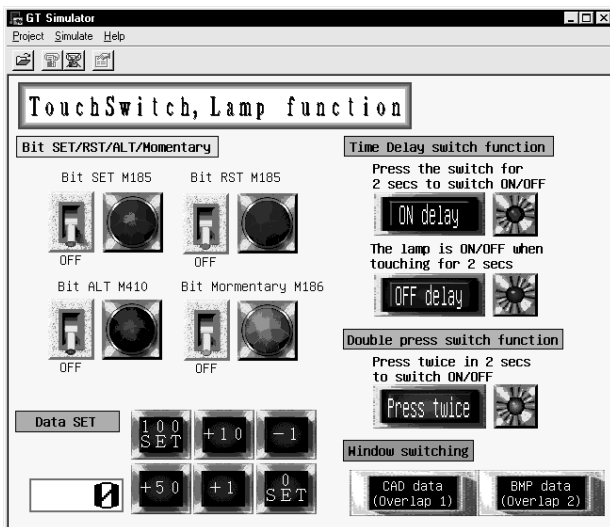


- 3) Simulation of the project simulated previously starts.


**POINT**

- When simulation is performed for the first time on GT Simulator, choosing "Start" causes GT Simulator to show the utility screen. In this case, choose "Open" (refer to Section 5.4) and read the monitor data to start simulation. For details of the utility function, refer to the GOT-A900 Series Operating Manual (GT Works Version5/GT Designer Version5 compatible Extended • Option Functions Manual)

5.4 Opening the Project

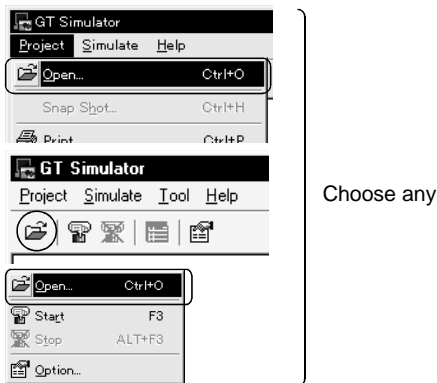


- 1) To open a project, choose any of the following.
  - "Project" - "Open"
  - "Open" on toolbar
  - "Open" by right-clicking the mouse

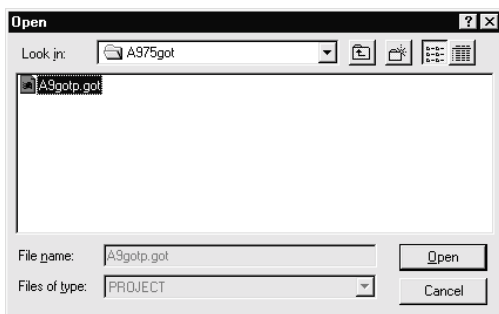


- 2) Choose the project where the monitor data created on GT Designer is stored. When you made correction to the project, always save it on GT Designer before opening the project.

<When GX Simulator is connected> <When CPU is connected>

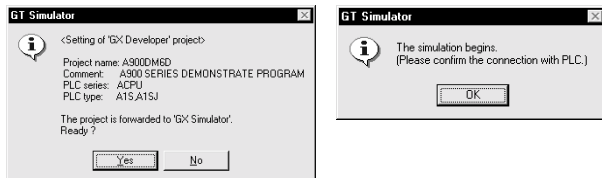


- 3) The left dialog box appears. The message displayed changes with the connection method in Option setting. Choose  or  to transfer data.

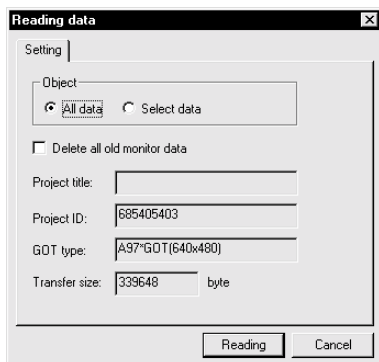

- 4) As the "Reading data" dialog box appears, make settings. (Refer to Section 6.4.1) Choosing [Reading] reads the monitor data of the selected project.

5.4.1 Description of the monitor data reading dialog box

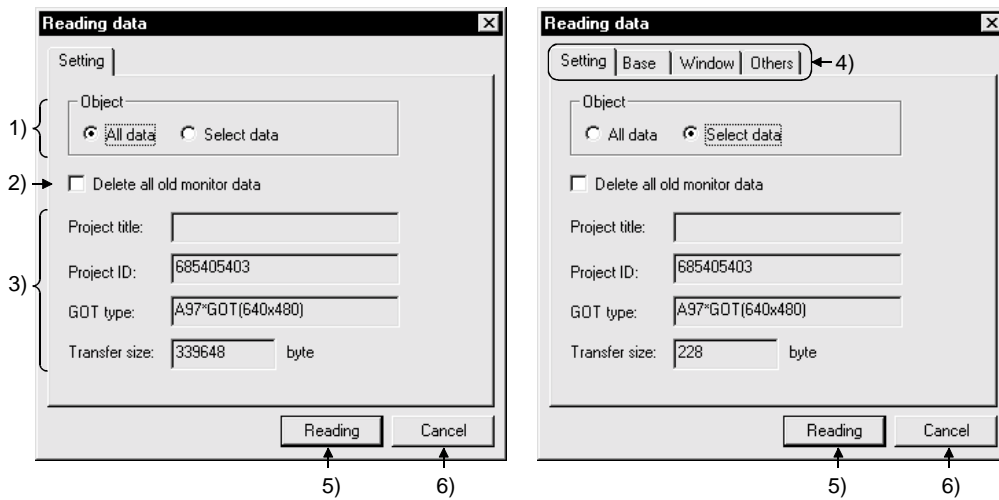


Number	Item	Description
1)	Object	"All data" Check when reading all monitor data of the selected project. "Select data" Check when reading some monitor data of the selected project.
2)	Delete all old monitor data	Turn on the check box when reading the monitor data of the selected project after deletion of the already read monitor data.
3)	Project title Project ID GOT type Trans size	The settings and data size of the monitor data to be read appear.
4)	"Base" "Window" "Others" Tab	Turn on the read data check boxes when you chose "Select data" in Object. "Base"/"Window" tab Turn on the screen number and screen title check boxes of the screen to be read. "Others" tab Turn on the read data (part data, comment, common settings, high-quality font, sound WAVE) check boxes. Common settings are always read.
5)	Reading	Used to read the monitor data of the selected project.
6)	Cancel	Used to cancel reading the monitor data of the selected project.



## 5.5 Simulating Operation


On GT Simulator, touching the touch keys is performed by pressing the mouse button. As the input validity range of the touch key is narrower than that of the actual GOT, securely touch the touch key. Touching is indicated by "beep".

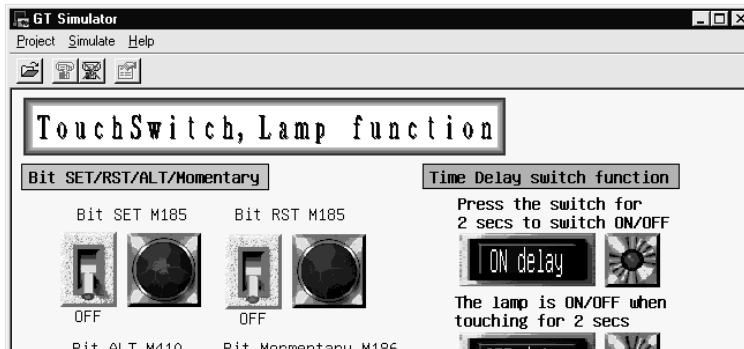

### POINT

- When the sound card is fitted, the sound set in "Default sound" after choosing "Control Panel"->"Sounds" beeps on Windows® 95, Windows® 98, Windows® Me.
- The debugging example using the sample screen data packed with GT Works Version 5/GT Designer Version 5 is given in the appendix.

## 5.6 Exiting from GT Simulator

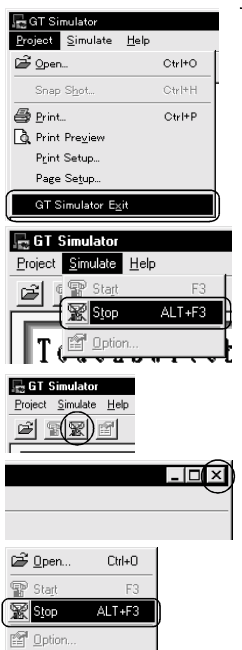

Choose any

- 1) To exit from GT Simulator, choose any of the following.
  - "Project" - "GT Simulator Exit"
  - "Simulate" - "Stop"
  - "Stop" on toolbar
  - "Close" in system menu
  - "Stop" by right-clicking the mouse

## Chapter 6 FUNCTIONS OF GT SIMULATOR


### 6.1 Snap Shot Function

The snap shot function allows a screen image being simulated on GT Simulator to be saved into any folder as a BMP format file.

#### 6.1.1 Operating procedure



- 1) Choose "Project" - "Snap Shot" during GT Simulator simulation.

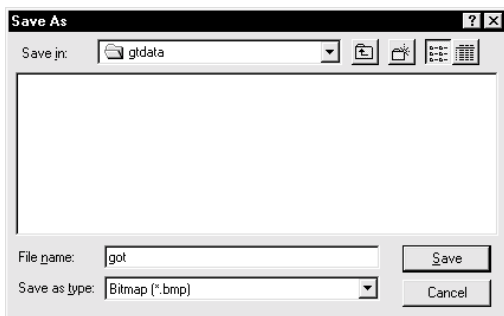

- 2) Choose the folder which will save the data. After setting the file name, press  to save the screen image of GT Simulator in BMP format.

## 6.2 Print Function

The print function allows a screen image being simulated on GT Simulator to be output to a printer.

### 6.2.1 Operating procedure



- 1) Choosing "Project" - "Print" during GT Simulator simulation starts printing.


Note that printing cannot be done if the printer is not specified.

### 6.2.2 Print preview

Selecting Print preview shows a printing image.

### 6.2.3 Page setup

Selecting Page setup shows the following dialog box.

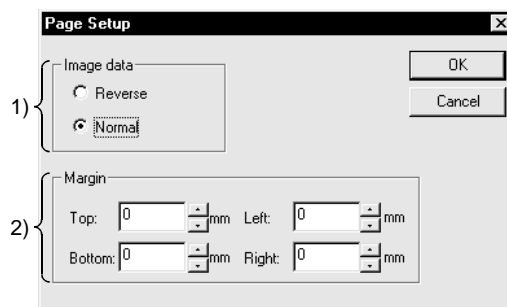


Number	Item	Description
1)	Image data	Choose "Reverse" to print the screen in reverse video. (Defaults to "Normal".)
2)	Margin	Set the margins on a page to be printed. When margins have been set, the screen to be printed is reduced according to the specified values. The reduction image of the screen can also be checked in Print preview.

## Chapter 7 DEVICE MONITOR FUNCTIONS

### 7.1 Overview

This section deals with the device monitor function usable on GT Simulator. The device monitor function allows you to check and change the device values of the monitor screen data simulated on GT Simulator. You can perform efficient debugging since you can change device values with the device monitor function and check indication changes on GT Simulator.

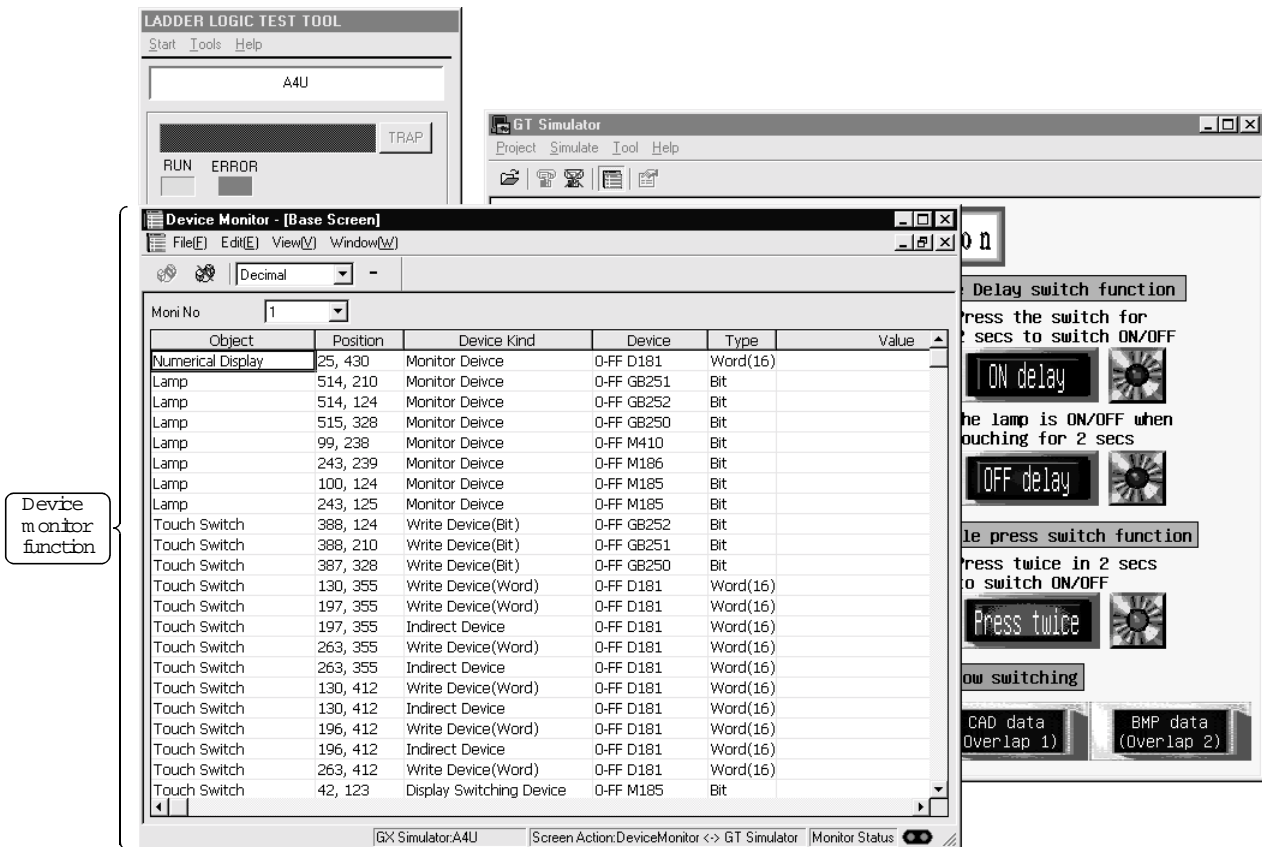

## 7.2 Restrictions on and Instructions for use of Device Monitor

This section explains the restrictions on and instructions for use of the device monitor function.

When using the device monitor function, also take into consideration the restrictions on and instructions for use of GT Simulator.

Refer to Section 3.3 for the restrictions on and instructions for use of GT Simulator.

### (1) Instructions for use of device monitor function

- You cannot start multiple device monitor functions.
- Device monitor function shows the device list by the screen.  
For the device value GT Simulator does not show on the screen, set the device on “free registration screen” and refer the device value.
- The device set on the called function will not be shown when screen call function is used.  
For the device value on the called function, set the device on “free registration screen” and refer the device value.
- The monitored device cannot be switched by using station switching function, when the GT Simulator is directly connected with CPU. (Each device set with GT Designer will be monitored).  
For the monitored device, set the device on “free registration screen” and refer the device value.

### (2) Instructions for use of GX Simulator

In regard to the devices out of the GX Simulator’s support, the values are not shown


### (3) Instructions for third party PLC monitoring (when GX Simulator is connected)

In regard to the devices out of the range, the values are not shown.  
(Refer to Section 3.4 for the device ranges that can be monitored.)

7.3 Screen Configuration of Device Monitor


7.3.1 Screen Configuration and Various Tools of Device Monitor

This section describes configuration and various tools of device monitor function.

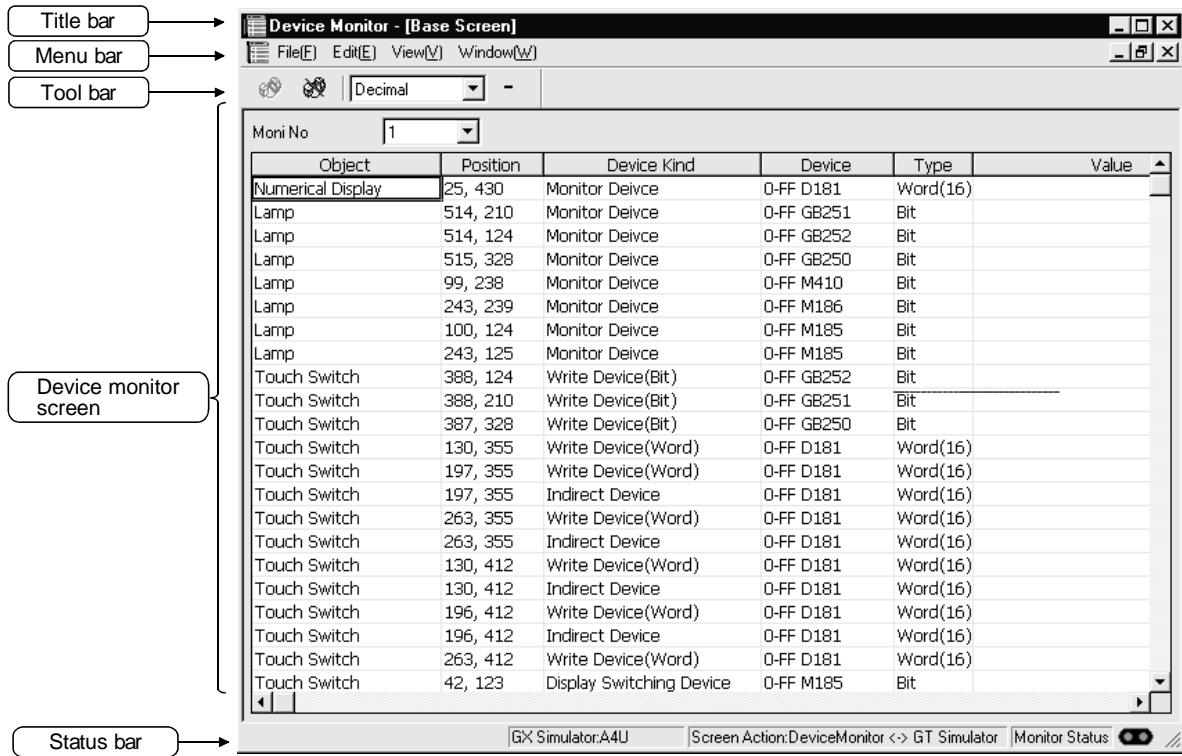

(1) Tool bar


The toolbar buttons are described below.



Number	Name	Description
1)	Start	Starts device monitoring.
2)	Stop	Stops device monitoring.
3)	Change	Choose the device value display format in the list box.
4)	Sign	Make selection when handling the device value as a signed BIN value. (You can make selection only when "Decimal" is chosen in 3)).

(2) Status bar

The status bar will be described below.



Number	Description
1)	Gives a brief description of any tool button or menu item at the mouse cursor.
2)	Shows the CPU type currently connected.
3)	Shows the current Monitor Mode Setting*. Device Monitor <-> GT Simulator Changing either of the Device Monitor screen and GT Simulator screen also changes the other. Device Monitor -> GT Simulator Changing the Device Monitor screen changes the GT Simulator screen. If you change the GT Simulator screen, the Device Monitor screen does not change. GT Simulator -> Device Monitor Changing the GT Simulator screen changes the Device Monitor screen. If you change the Device Monitor screen, the GT Simulator screen does not change. Device Monitor -><- GT Simulator Changing either of the Device Monitor screen and GT Simulator screen does not change the other.
4)	Indicates the monitor status with the lamps. Lamps flickering : Indicates that devices are being monitored. Both lamps are lit green : Monitor is at a stop.


\* Refer to Section 7.6 for the way to make Monitor Mode Setting.

**POINT**

You can make selection to display or hide the toolbar and status bar.  
 Choosing "View" - "Toolbar" or "Status bar" on the menu bar displays or hides the toolbar or status bar.

Checked : The toolbar/status bar is displayed.

Unchecked : The toolbar/status bar is hidden.

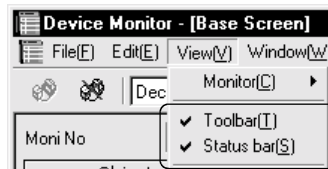





(b) Items displayed on Device Monitor screen

The items displayed on the Device Monitor screen will be described below.

Object	Position	Device Kind	Device	Type	Value	Chan
Numerical Input	25, 430	Monitor Device	0-FF D181	Word(16)		0 Input
Lamp	243, 125	Monitor Device	0-FF M185	Bit		0 OFF

1) Object

Shows the preset object names.

(Display example)

Object
Numerical Input
Lamp
Lamp
Lamp
Lamp
Lamp
Touch Switch
Touch Switch

2) Position

Displays the displayed object positions (coordinates).

(Display example)

Position
25, 430
243, 125
100, 124
243, 239
99, 238
515, 328
514, 124
514, 210

3) Device Kind

Shows the device types.

(Display example)

Device Kind
Monitor Device
Monitor Device
Monitor Device
Monitor Device
Monitor Device
Monitor Device
Write Device(Bit)
Display Switching Device

4) Device

Shows the devices set for the objects. The devices are represented as on GT Designer.

(Display example)

Device
0-FF D181
0-FF M185
0-FF M185
0-FF M186
0-FF M410
0-FF GB250
0-FF GB252

5) Type

Shows the used device types.  
 When bit device is used : Bit  
 When word device (16 bit) is used : Word (16)  
 When word device (32 bit) is used : Word (32)

(Display example)

Type
Word(16)
Word(16)
Bit
Bit
Bit
Bit
Bit

6) Value

Shows the device values as indicated below according to their formats and display systems.

(Display example)

Value
20
512
1
0
0
0
0

Device Format	Display Range	Device Number Representation
Bit	0, 1	Binary/octal/decimal/hexadecimal indication, 1 digit
Word (16)	0 to 1111111111111111	Binary indication, 16 digits
	0 to 177777	Octal indication, 6 digits
	0 to 65535	Unsigned decimal indication, 5 digits
	-32768 to 32767	Signed decimal indication, 6 digits
	0 to FFFF	Hexadecimal indication, 4 digits
Word (32)	0 to 111.....111	Binary indication, 32 digits
	0 to 3777777777	Octal indication, 12 digits
	0 to 4294967295	Unsigned decimal indication, 10 digits
	-2147483648 to 2147483647	Signed decimal indication, 11 digits
	0 to FFFFFFFF	Hexadecimal indication, 8 digits

7) Function

Shows the Common names set on GT Designer.

(Display example)

Function
Switching Screen/Switchin
Switching Screen/Switchin

7.3.2 Menu Configuration

This section lists and describes the commands assigned to the menu bar.

- File — Exit Device Monitor ..... Terminates the device monitor function.
- Edit —
    - Regist Device ..... Registers any devices on the Free Registration screen.
    - Delete Device ..... Deletes registered devices.
    - Delete All Device ..... Deletes all registered devices.
  - View —
    - Monitor —
      - Connect ..... Starts device monitoring.
      - Disconnect ..... Stops device monitoring.
    - Toolbar ..... Displays/hides the toolbar.
    - Statusbar..... Displays/hides the status bar.
    - Configure..... Sets the device monitor function.
  - Window —
    - Cascade ..... Shows the displayed Device Monitor screens one over another.
    - Horizontal..... Shows the displayed Device Monitor screens horizontally.
    - Vertical ..... Shows the displayed Device Monitor screens vertically.
    - Base ..... Selects the base screen or shows it at the forefront.
    - Overlap1 ..... Selects the overlap window 1 screen or shows it at the forefront.
    - Overlap2 ..... Selects the overlap window 2 screen or shows it at the forefront.
    - Super Inpose..... Selects the superimpose window 1 screen or shows it at the forefront.
    - Common ..... Selects the Common screen or shows it at the forefront.
    - Free Regist..... Selects the Free Registration screen or shows it at the forefront.

7.4 How to Operate the Device Monitor Function

The following is the operation procedure from starting the device monitor function until terminating it.


This section provides the operation procedure.

Refer to Section 7.5 for the functions that can be used with the device monitor function.



- 1) While GT Simulator is simulating, choose either of the following to start the device monitor function.


- "Tool" - "Start of Device Monitor"
- "Device Monitor" on toolbar

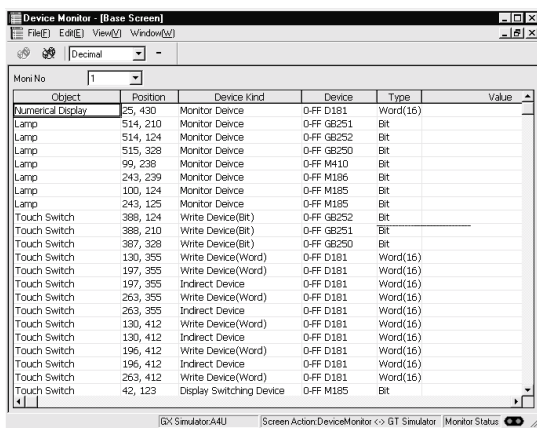

- 2) After making selection in 1), the device monitor function starts.

The device monitor function may be started only when GT Simulator is simulating the monitor screen data.

If GT Simulator is not executing simulation, you cannot use the device monitor function.

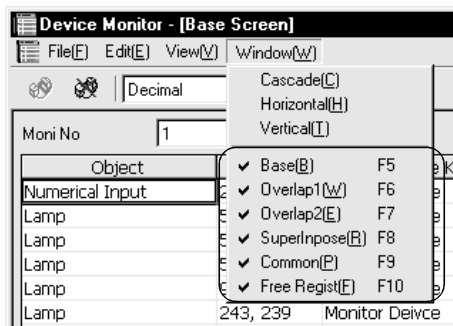

- 3) At a start, the device monitor function displays the base screen 1.

When you want to show another screen, choose "Window" on the toolbar of the device monitor screen and select the screen you want to display.

When the selected Device Monitor screen has already been displayed, it is shown at the forefront.

(To the following page)



All Device Monitor screens can be displayed together.

Refer to Section 7.5.4 for the way to display all screens together.


(From the previous page)




[Only when base or window screen is displayed]

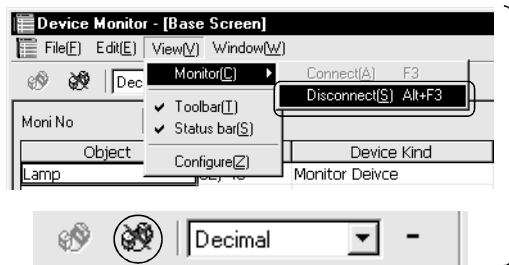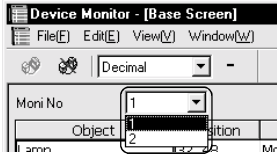

Choose any

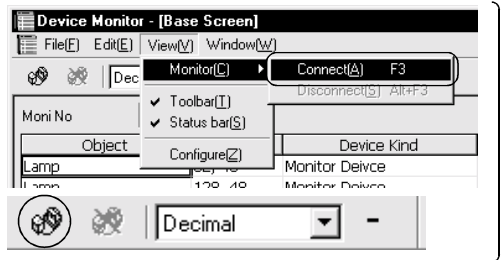

Choose any

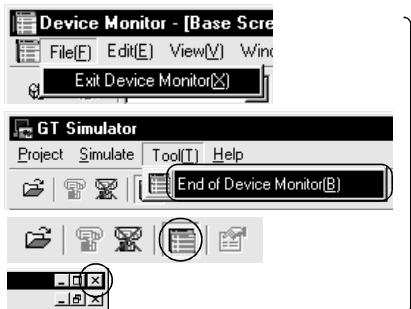

Choose any

4) When the base or window screen is displayed, choosing "Moni No" at top of the screen enables you to select the base screen number to be displayed or whether to display/hide the window screen.

5) When you want to stop monitor, choose either of the following.

- "View" - "Monitor" - "Disconnect" on the Device Monitor function menu bar
- Stop tool button

If monitor is stopped, the device monitor function is not terminated.

6) When you want to restart monitor, choose either of the following.

- "View" - "Monitor" - "Connect" on the Device Monitor function menu bar
- Start tool button

7) To terminate the device monitor function, choose any of the following.

- "File" - "Exit Device Monitor" on the Device Monitor function menu bar
- "Tool" - "End of Device Monitor" on the GT Simulator menu bar
- "Device Monitor" on the GT Simulator toolbar
- "Close" in system menu

If you exit from GT Simulator before terminating the device monitor function, the device monitor function is also terminated automatically.

### 7.5 Device Monitoring Functions


This section describes the device monitoring functions.

#### 7.5.1 Sort function

This function allows the data displayed by the device monitor function to be arranged in ascending or descending order of ASCII codes or numerical value.

By default, the column data on the left of the corresponding screen are displayed in ascending order of ASCII codes or numerical value.

In regard to the free registration screen, the devices are showed in the order in which they were entered.

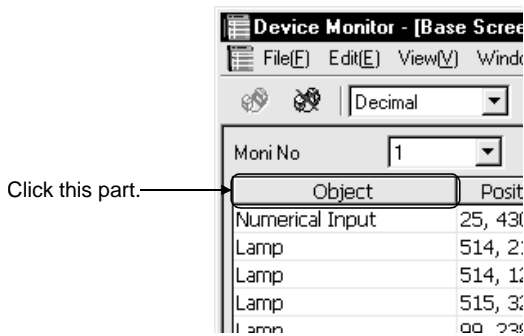

- 1) Clicking the title section of the corresponding column rearranges the column data in descending order of ASCII codes or numerical value.

Clicking the same column again rearranges the data in ascending order.

After that, click the column to alternate between the ascending order and descending order.

**POINT**

- You can set the display order of the "Object" column data freely. Refer to Section 7.6.2 for details.
- You cannot rearrange the "Chan" column data.

#### 7.5.2 Device value edit function

With this function, you can enter or change a device value.

You can check how the indication of the entered or changed device value changes on GT Simulator.

##### (1) Values that may be entered or changed

The values that may be entered or changed are governed by the device types and device value display formats.


The values that may be entered or changed are indicated below.

Item	Device Value Display Format			
	Binary	Octal	Decimal	Hexadecimal
Bit device	0, 1			
Word device (16), (32)	0, 1	0 to 7	0 to 9	0 to 9, A to F

(2) Entering or changing method



How to enter or change a device value is given below.

(a) When editing a bit device

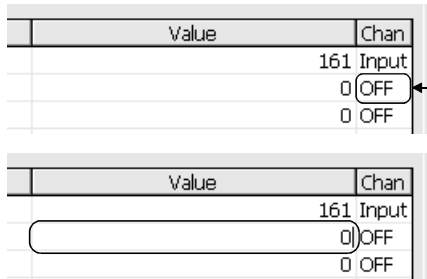


- When entering a value with the mouse  
Clicking "ON" or "OFF" in the column whose value will be changed highlights the indication.
- When entering a value from the personal computer keyboard  
Choose the "Value" item and enter a value from the keyboard.  
Pressing the Enter key determines the entered value.

(b) When editing a word device

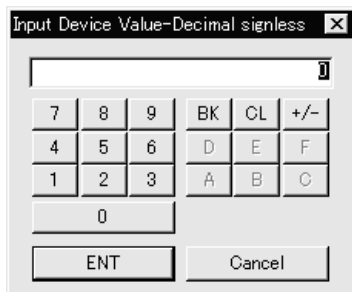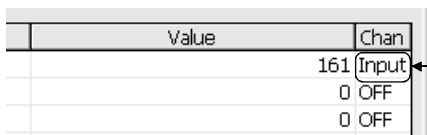

- When entering a value with the mouse  
Clicking "Input" in the column whose value will be changed shows the Input Device Value dialog box. Enter or change a device value.
- 0 to 9, A to F : Enter a device value.
- +/- : Clicking here after device value entry changes the positive indication into negative.  
Clicking here again returns the indication too positive.
- BK : Erases one character before the cursor.
- CL : Erases all the value entered.
- ENT : Determines (registers) the entered value and closes the dialog box.
- Cancel : Closes the dialog box without the entered value being registered.

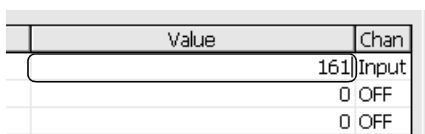


- When entering a value from the personal computer keyboard  
Choose the "Value" item and enter a value from the keyboard.  
Pressing the Enter key determines the entered value.

7.5.3 Device registration function

You can register any device on the Free Registration screen and enter or change a device value.


By entering or changing a value after registering a device not set in the monitor screen data, you can make an operation check after the change.

(1) How to register a device

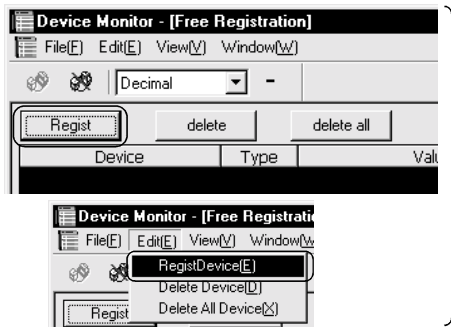


1) After displaying the Free Registration screen, choose either of the following.

- Regist button on the Free Registration screen
- "Edit" - "Regist Device" on the menu bar

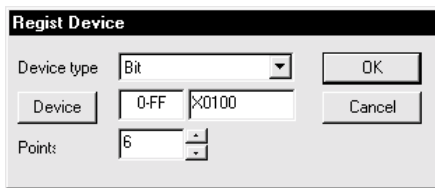

2) As the Regist Device dialog box appears, set the corresponding items and click the OK button.

- Device type : Set the device type to be registered.
- Device : Set the device.  
The device setting method is the same as on GT Designer.
- Point : Consecutive devices corresponding to the number set in "Point" are registered, relative to the value set in "Device".

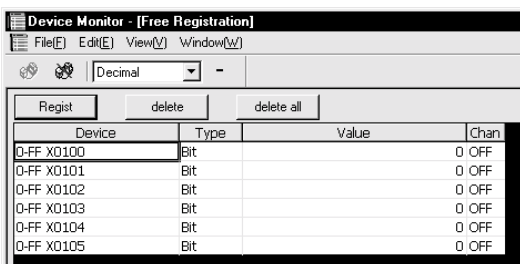


3) The devices are registered.

**POINT**

- The devices are displayed from top to bottom in registration order.
- Since the registered devices are saved when GT Simulator is terminated, they are also displayed at a next start.
- If the CPU type connected at a next start is changed after device registration, the registered devices are deleted.  
When you do not want to delete the registered devices, do not change the CPU type.



(2) How to delete the registered devices

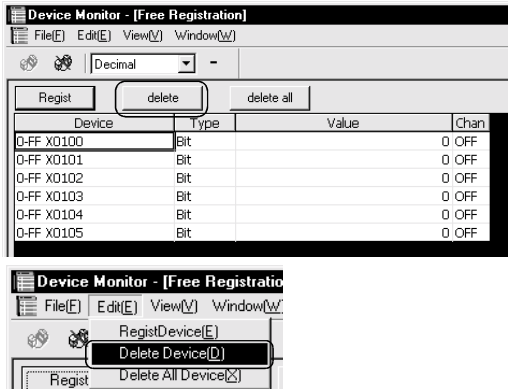

Choose any

1) After choosing the row you want to delete, select either of the following.


- delete button on the Free Registration screen
- "Edit" - "Delete Device" on the Device Monitor function toolbar

Choosing the delete all button or "Edit" - "Delete All Device" on the toolbar deletes all devices registered on the Free Registration screen.


7.5.4 Function to display all Device Monitor screens together

You can display all device monitor screens together.

You can make selection from among "Cascade", "Horizontal" and "Vertical".

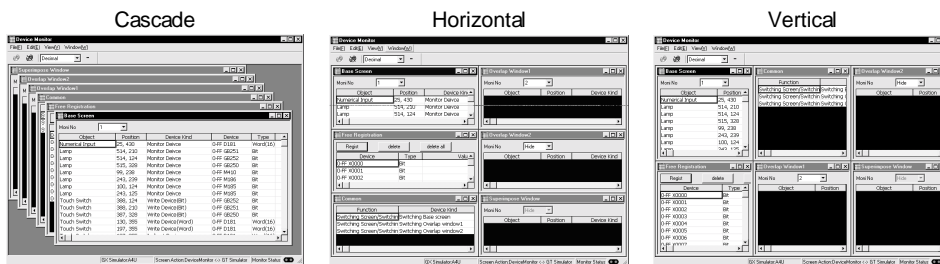

The following is how to display all screens together.

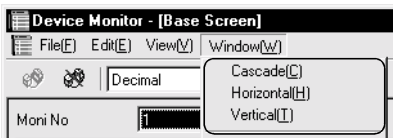

1) Choose "Window" - "Cascade/Horizontal/Vertical" on the Device Monitor function menu bar.

After making selection, the Device Monitor screens appear in the chosen arrangement.


## 7.6 Various Settings

In the device monitor function setting dialog box, you can make the following settings.


- Set the display order of Object column data on the Device Monitor screen.
- Set the display order of displayed column data on the Device Monitor screen.
- Choose the pattern to switch between the Device Monitor screen and GT Simulator screen.
- Choose whether the internal device (GD, GB, GS) states will be saved or not at termination of GT Simulator.

### 7.6.1 How to display the setting dialog box

The way to display the setting dialog box is described below.

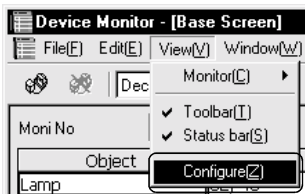

- 1) Choose "View" - "Configure" on the Device Monitor menu bar.

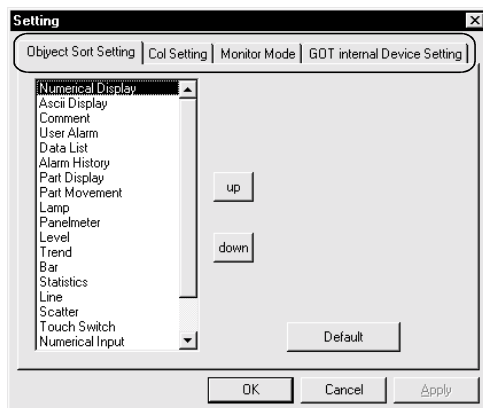


- 2) As the setting dialog box appears, choose the tab you want to set.

7.6.2 Settings and setting methods

(1) Object Sort Setting


You can set the display order of the "Object" column data shown on base or window screen.

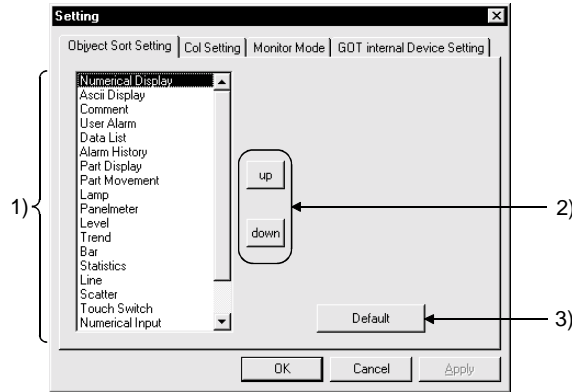

No.	Item	Description
1)	Object item	Choose the object item you want to move.
2)	Up, down	Used to move the object selected in the object item.
3)	Default	Used to select the standard (default) setting of the object item display order.

(2) Col Setting

You can set the displayed column data order on the base, window or common screen.

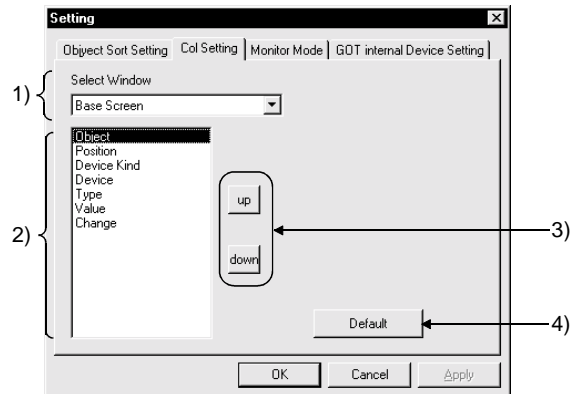


No.	Item	Description
1)	Select Window	Choose the Device Monitor screen where you want to change the displayed column data order. (The default is the base screen.)
2)	Displayed column item	Choose the displayed column item you want to move.
3)	Up, down	Used to move the object selected in the displayed column item.
4)	Default	Used to select the standard (default) setting of the displayed column item display order.

(3) Monitor Mode

You can set the pattern to switch between the Device Monitor screen and GT Simulator monitor screen.

By setting the switching pattern, you can also disable the Device Monitor screen and GT Simulator monitor screen from being synchronized.

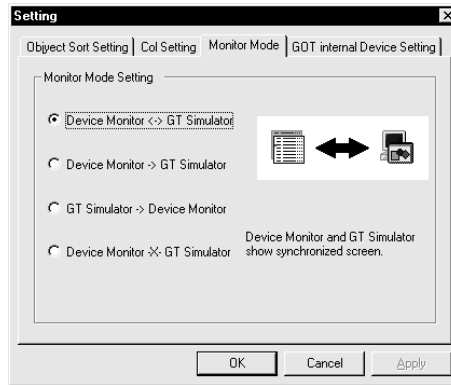

No.	Item	Description
1)	Monitor Mode Setting	<p>Choose the screen switching pattern. (The default is device monitor &lt;-&gt; GT Simulator.)</p> <p><b>Device Monitor &lt;-&gt; GT Simulator</b> Changing either of the Device Monitor screen and GT Simulator screen also changes the other.</p> <p><b>Device Monitor -&gt; GT Simulator</b> Changing the Device Monitor screen changes the GT Simulator screen. If you change the GT Simulator screen, the Device Monitor screen does not change.</p> <p><b>GT Simulator -&gt; Device Monitor</b> Changing the GT Simulator screen changes the Device Monitor screen. If you change the Device Monitor screen, the GT Simulator screen does not change.</p> <p><b>Device Monitor -&gt;&lt;- GT Simulator</b> Changing either of the Device Monitor screen and GT Simulator screen does not change the other.</p>

**POINT**

Monitor Mode Setting is made to set only switching between the Device Monitor function and GT Simulator screens.  
Any changes, such as entry and change of device values, are reflected on the Device Monitor function and GT Simulator.  
When you do not want to reflect device value changes, stop communication and enter and/or change device values. (Refer to Section 7.4.)

#### (4) GOT internal Device Setting

When exiting from GT Simulator, you can save the internal device (GD, GB, GS) states and display the saved states at the time of next monitoring.



No.	Item	Description
1)	Keep Values	Check this check box to save the internal device values at monitor stop or end, and display the saved internal device values at the time of next monitoring.  (Default is the checked check box.)

## Chapter 8 TROUBLESHOOTING

The following table indicates the error messages displayed during use of GT Simulator, their definitions and causes, and corrective actions.

## (1) Error messages displayed when GT Simulator is used

Number	Error message	Definition and cause	Corrective action
1	'GX Simulator' is not installed.	<ul style="list-style-type: none"> <li>• GX Simulator was not installed.</li> <li>• GX Simulator was not installed properly.</li> </ul>	Install GX Simulator.
2	The version of installed 'GX Simulator' is illegal.	Old version of GX Simulator was installed.	
3	Project path of 'GX Developer' cannot be acquired.	<ul style="list-style-type: none"> <li>• Registry information on the project path of GX Developer is corrupted.</li> <li>• Incompatible CPU type was specified.</li> </ul>	In Option setting, set the project of GX Developer again.
		GT Simulator was not installed properly.	After uninstalling GT Simulator, reinstall it.
4	PLC type of 'GT Simulator' setting and 'GX Developer' setting is different.	CPU type setting has contradiction.	Change the CPU type of the GX Developer project.
5	Failed in the start of Shared memory server.	<ul style="list-style-type: none"> <li>• You exited from GT Simulator, GX Simulator and/or GX Developer in unauthorized status last time.</li> <li>• Unauthorized process is operating.</li> </ul>	<ul style="list-style-type: none"> <li>• After restarting the personal computer, restart GT Simulator.</li> <li>• Reinstall the update versions of GT Simulator, GX Simulator and/or GX Developer.</li> </ul>
6	Failed in the initialization of 'GX Simulator'.	GX Simulator may have not been installed properly.	After uninstalling GT Simulator, reinstall it. Reinstall the update versions of GT Simulator, GX Simulator and/or GX Developer.
7	Installation path of 'GT Simulator' cannot be acquired.	GT Simulator may have not been installed properly.	After uninstalling GT Simulator, reinstall it.
8	Parameter file is not found.	GT Simulator may have not been installed properly.	
		Unauthorized GX Developer project may have been set.	Set the GX Developer project which has no errors.
9	Program file is not found.	GT Simulator may have not been installed properly.	After uninstalling GT Simulator, reinstall it.
		GX Simulator may have not been installed properly.	Set the GX Developer project which has no errors.
10	Insufficient memory to starting 'GX Simulator'.	Dynamic memory cannot be secured.	Secure memory space. <ul style="list-style-type: none"> <li>• Close unnecessary applications.</li> <li>• Check free hard disk space.</li> </ul>
11	An illegal project of 'GX Developer' is selected. Project cannot be forwarded to 'GX Simulator'.	Unauthorized program exists in the GX Developer project folder.	Reexamine the GX Developer project.
12	Unsupport PLC type is selected.	CPU type setting of GT Simulator is the unsupported CPU type.	Change the CPU type and restart monitoring.
13	Failed in the initialization of 'GX Simulator'.	<ul style="list-style-type: none"> <li>• You exited from GT Simulator, GX Simulator and/or GX Developer in unauthorized status last time.</li> <li>• Unauthorized process is operating.</li> </ul>	<ul style="list-style-type: none"> <li>• Restart GT Simulator.</li> <li>• After restarting the personal computer, restart GT Simulator.</li> </ul>
	<ES: * * * * * > * * * * * * * * * * error (32 different messages in all)		
14	There is no response from 'GX Simulator' for termination request. 'GX Simulator' is canceled. Please end 'GT Simulator'		
15	An illegal project of 'GX Developer' is selected.	Project specified in "GX Developer project" in Option setting is unauthorized.	Specify the correct GX Developer project.

Number	Error message	Definition and cause	Corrective action
16	GOT type of the project is not correct.	GOT type of the read project is other than the GOT-A900 series (GOT-F900 series).	Change the GOT type of the project created on GT Designer to the GOT-A900 series.
17	PLC type of the project is different from setting 'GT Simulator'.	PLC type of the read project is different from the setting on GT Simulator.	Make correction so that the PLC type of the project created on GT Designer is the same as the CPU type of GT Simulator.
18	Cannot access the project file.	Access to the specified project file could not be made.	Check the access right of the project file (e.g. a9gotp.got).
19	Failed in reading. Please retry after checking the following. • Data size and number of the data. • Capacity of free disk. • Please close Dialogue if it is displayed. • Waiting for 'Offline mode'. Please wait at several seconds. • File access privilege of the project file.	Screen data size is too large.	Check to see if the screen data size is not more than 9M bytes.
		Hard disk is short of free space.	Increase the free space of hard disk to more than 50M bytes.
		Since the message such as "This function can't be used now." is displayed on the screen, read cannot be performed.	After choosing "OK" in the dialog box to erase the on-screen message, perform read again.
		Waiting for the end processing of the script function. (Waiting for offline mode)	After the message "Off-Line processing execution" appears on the screen, perform read again.
		Access to the project file cannot be made.	Check the access right of the project file (e.g. a9gotp.got).
20	Fall to delete recipe files. • Please close recipe file if it is opened. • Check the file access privilege.	After screen data reading, recipe file deletion failed.	• If there is a recipe file opened by another software, close that file. • Check the file access right.
21	The simulation cannot be ended. Please retry after shutting Dialogue on the simulation screen	Since the message such as "This function can't be used now." is displayed on the screen, you cannot exit from GT Simulator properly.	After choosing "OK" in the dialog box to erase the on-screen message, exit from GT Simulator again.
		There is the other internal cause than the above that does not allow you to exit from the software.	After choosing "OK" in the dialog box, wait for some time and exit from GT Simulator again.
22	Please do logoff/the termination of Windows after ending 'GT Simulator'.	Logoff/exit processing of Windows was executed before exiting from GT Simulator.	After exiting from GT Simulator, execute logoff/exit processing of Windows.
23	This function can't be used now.	You selected the function unusable with GT Simulator.	Press "OK".
24	check communication	Cable is disconnected. Cable is open.	Check the cable.
		Communication port setting mistake	Check the communication port in Option setting on GT Simulator.
		Transmission speed (baudrate) is incorrect.	Check the transmission speed (baudrate) of the CPU.
		Connection target PLC differs from the PLC type of the project.	Check the connection target PLC.
25	Communication error occurred. • Retry : Communication begins again. • Cancel : Communication is interrupted. Please reexecute 'GT Simulator', if simulate again.	Cable is disconnected. Cable is open.	After checking for the left causes, choose the button in the displayed dialog box.
		Communication port setting mistake	"Retry" Restarts communication.
		Transmission speed (baudrate) is incorrect.	"Cancel" After Cancel is selected, all communications will not be made.
		Connection target PLC differs from the PLC type of the project.	When performing simulation, restart GT Simulator.

## (2) Error messages displayed when device monitor function is used

Error message	Definition and cause	Corrective action
Already exist Device Monitor	The device monitor function has already started.	Check the taskbar and choose the device monitor function which has already started. From Task Manager or the like, terminate the hidden device monitor function and restart the function.
Device Monitor files not exists!	The installation file for device monitor function has been deleted.	After uninstalling GT Simulator, reinstall it.
Fail application setting	The environment setting file for device monitor function has been corrupted.	
Monitoring Error	Communication initialization failed.	Occurrence of a communication error at a monitor start will put execution in a standby status.
Cannot read Data files Try to read data on GT Simulator	GT Simulator does not read monitor screen data.	After using GT Simulator to read the monitor screen data, run the device monitor.
Invalid string for device	The data input for device registration is not correct.	Check the device representation characters, device number and bit position entered and register the device.
Invalid Net Work or Station No.	The network input data is not correct.	Check the value which can be set for the network and enter that value.
□□ is over □□.□□	The input value is outside the range.	Enter the value in accordance with the message instruction.
□□ is invalid value	The input device number has an illegal format or is outside the range.	Enter the device number in a correct format. Enter the value within the range.
Invalid Device Number!	The input device number is an odd number.	Enter an even number as the device number.
In Multiples of 16 for Word of Bit Device	When the word was specified for the bit, the device number entered is not a multiple of 16.	Enter the value as a multiple of 16.
In Multiples of 16 plus 1 for Word of Bit Device	When the word is specified for the entry of the bit device for Yasukawa GL, the device number entered is not a multiple of 16 plus 1.	Enter the value as a multiple of 16 plus 1.
Over registered count	The number of freely registered items is more than 65535.	Delete the already registered free registration items and reregister what you want to register.
Value is over range	The input device number is outside the range.	Enter the number within the range.
memory is not enough	Shared memory creation failed.	Secure enough memory, start GT Simulator, and use device monitor.



APPENDICES


Appendix 1 Examples of using GT Simulator

The sample monitor data supplied by GT Works Version 5/GT Designer Version 5 is used to explain how to use GT Simulator specifically. As GT Simulator, GX Developer and GT Designer are used in these examples, install these software programs into the personal computer. Refer to the following manuals for the ways to install and start the software.


Software	Manual name
GT Simulator	GT Works Version5/GT Designer Version5
GT Designer	Operating Manual (Start up Manual)
GX Simulator	GX Simulator Operating Manual (Start up Manual)

Appendix 1.1 Simulating the sample monitor data

Use the following procedure to perform simulation on GT Simulator using the GOT900 series sample monitor data contained in GT Works Version 5/GT Designer Version 5.

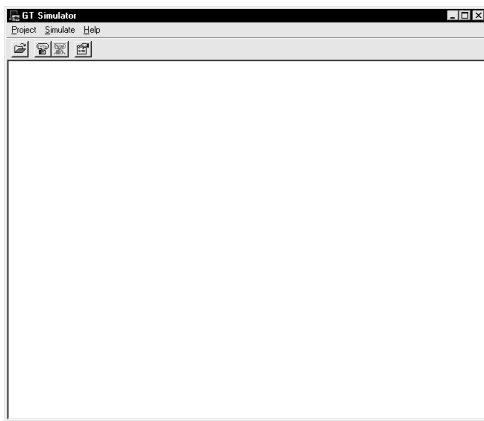

1) Start GT Simulator.

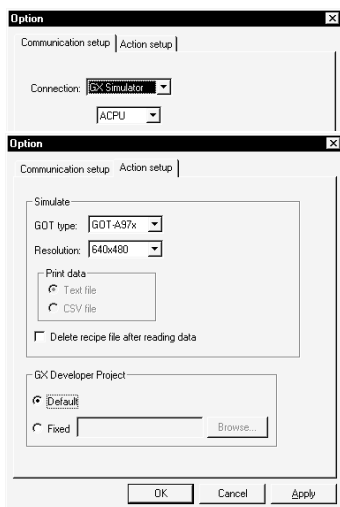




- 2) Set the options of GT Simulator. (Refer to Section 5.2.)  
 Make the following settings in the option setting dialog box.
- "Connection" : GX Simulator
  - : ACPU
  - Simulate
  - "GOT type" : GOT-A97\*
  - GX Developer Project : Default



(To the following page)

APP

(From the previous page)

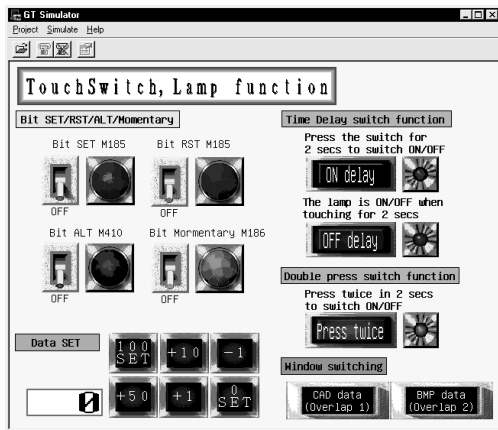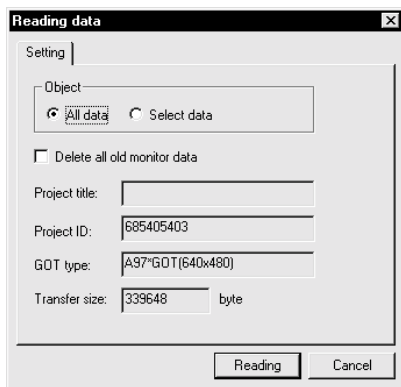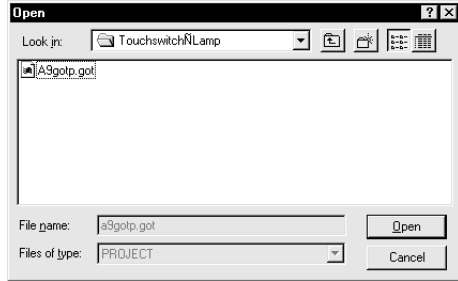

(To the following page)

3) Choose Open (refer to Section 5.4) to open the GOT900 series sample monitor data. The folder which includes the sample monitor data is "C:\Melsec\Gotr\Examples\A975got\Touchswitch • Lamp".

4) Make the following setting in the monitor data reading dialog box. "Object": All data

5) After completion of reading, the GOT900 series sample monitor data appears and simulation starts.


(From the previous page)



- 7) Press the ON delay switch of the Time Delay switch function.  
For the ON delay switch, holding down the mouse button for 2 seconds lights up its lamp.
- 8) After making sure that the lamp is lit, exit from GT Simulator.

**POINT**

Starting the Device Monitor function during simulation on GT Simulator allows you to check or change device values in the simulated monitor screen data. Refer to Chapter 7 for details of the Device Monitor function.

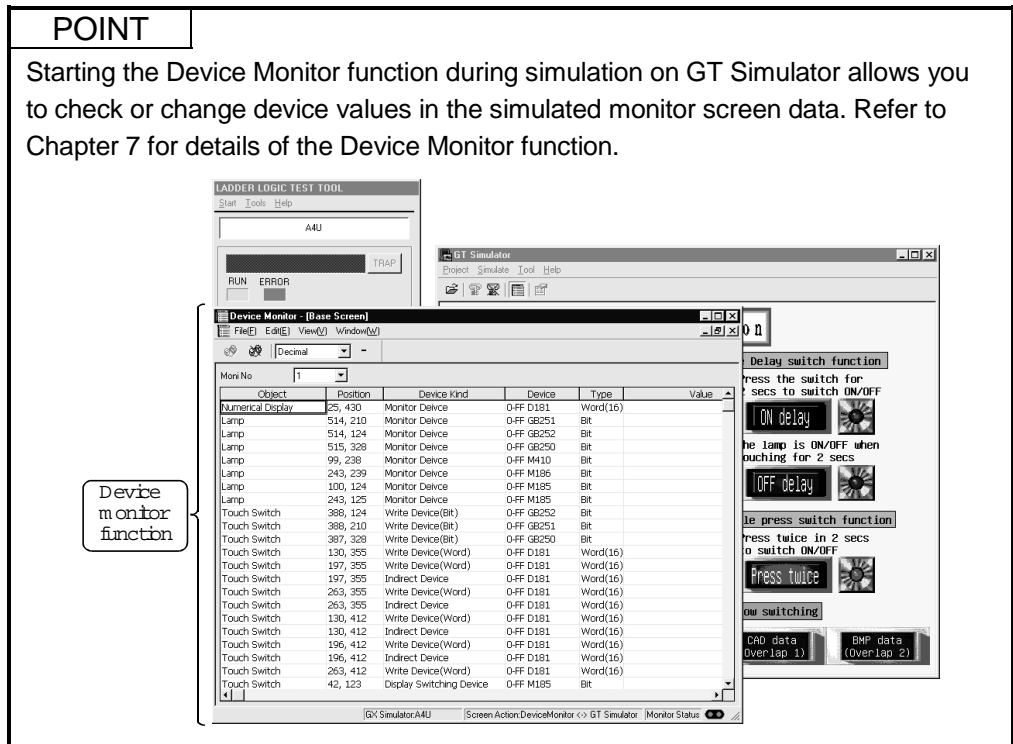

Device monitor function


Appendix 1.2 Making correction to the sample monitor data on GT Designer

Make correction to the sample monitor data which was processed in Appendix 1.1 so that the following operation is performed.


- 1) Holding down the ON delay switch for 5 seconds lights up the lamp.

Use the following procedure to make correction on GT Designer to the sample monitor data simulated on GT Simulator.


When correcting the sample monitor data, copy the data beforehand or choose "Save as" after correction to save it in the other folder.

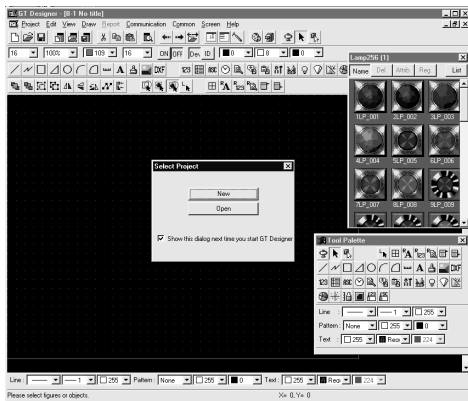

- 1) Start GT Designer.  
As the project selection dialog box appears, click "Open".

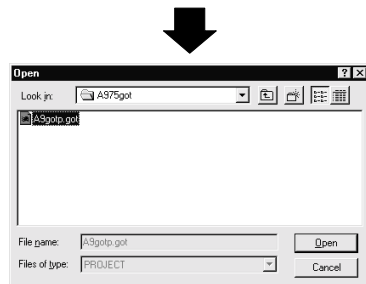




- 2) The GOT900 series sample screen opens.

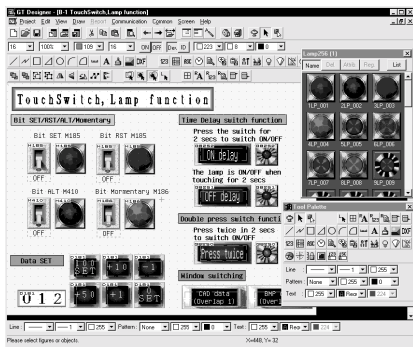

- 3) When the sample screen data appears, double-click the ON delay switch to open the touch key setting dialog box.

(To the following page)

(From the previous' page)

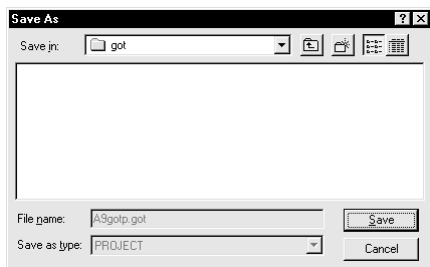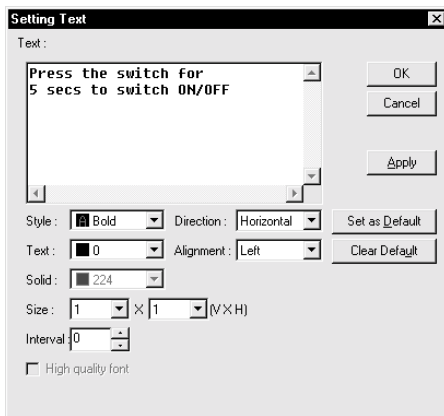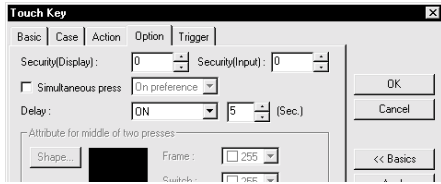

4) Choose the option setting tab and change the delay to 5 (seconds).  
After changing, close the touch key setting dialog box.

5) Double-click the text figure "Press the switch for 2 secs to switch ON/OFF" and change the text to " Press the switch for 5 secs to switch ON/OFF ".  
After changing, close the text figure setting dialog box.


6) Save the corrected monitor data in the other folder.

**POINT**

- When you have changed the GOT type or PLC type on GT Designer, always back up the project.  
Also, when you have made correction to the screen data, back up the data as far as possible.

Appendix 1.3 Simulating the sample monitor data corrected on GT Designer

The sample monitor data corrected on GT Designer is simulated on GT Simulator again.

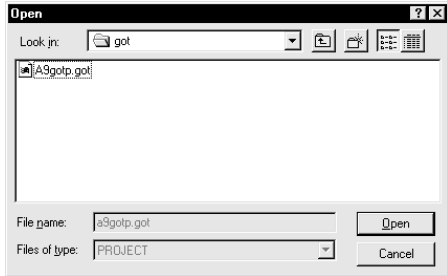

1) After starting GT Simulator, choose Open and read the corrected sample monitor data.

2) After completion of reading, press the ON delay switch.



3) As changed on GT Designer, the lamp is lit in 5 seconds. After confirming that operation is performed as changed, exit from GT Simulator.

## Appendix2 List of Functions Added to Update GT Simulator

The following table lists the GT Simulator functions added to the 26C version of GT Simulator.

In addition to the functions given in the following table, GT Simulator is also compatible with an update to GT Designer. For details of a GT Designer update, refer to the GT Works Version 5/GT Designer Version 5 Reference Manual.

○: Compatible, ×: Incompatible

Description		Version5								
		A	D	F	J	K	P	R	U	26C
PLC CPU that allows simulation	ACPU, Motion controller, QCPU(A mode)	○	○	○	○	○	○	○	○	○
	QCPU(Q mode), QnACPU, FXCPU	○	○	○	○	○	○	○	○	○
	Multiple PLC system	×	○	○	○	○	○	○	○	○
	Q00JCPU, Q00CPU, Q01CPU	×	×	×	×	×	○	○	○	○
	Q12PHCPU, Q25PHCPU	×	×	×	×	×	×	×	×	○
Object function	Simulate of the recipe function	○	○	○	○	○	○	○	○	○
	Compatible when the JPEG format when saving to the PC card	×	×	×	×	×	×	×	○	○
Device monitor function		×	×	○	○	○	○	○	○	○
Windows® Me and Windows® 2000 are added as compatible OS		×	×	×	×	×	×	×	○	○





## INDEX

## [A]

- About drawing image ..... 3- 3
- Alarm history display function ..... 3- 4
- Applicable CPUs ..... 2- 5

## [C]

- Cable..... 2- 6
- Clock display function ..... 2- 5
- Converter ..... 2- 6
- CRT..... 2- 1

## [D]

- Description of the monitor data reading dialog box ..... 5- 7
- Description of the option setting dialog box... 5- 4
- Device Monitor function
  - Function to display all screens together ... 7-13
  - Screen configuration ..... 7- 3
  - Restrictions on and instructions ..... 7- 2
  - Setting ..... 7-14
  - How to operate ..... 7- 8
  - Sort function..... 7-10
  - Device value edit function ..... 7-10
  - Device registration function..... 7-12
  - Menu configuration ..... 7- 7
- Display color ..... 2- 1

## [E]

- Examples of using GT Simulator ..... APP- 1
- Execution of simulation ..... 5- 5
- Exiting from GT Simulator ..... 5- 9

## [G]

- GT Simulator operator method ..... 5- 1

## [H]

- Hard disk space..... 2- 1

## [K]

- Key board ..... 2- 1

## [L]

- List of functions Added to Update GT Simulator ..... App- 7

## [M]

- Main memory .....2- 1
- MELFANSWeb .....4- 2
- Menu configuration .....4- 2
- Monitor data that maybe simulator .....3- 3
- Mouse.....2- 1

## [O]

- Opening the project .....5- 6
- Option setting .....5- 3

## [P]

- Page setting .....6- 2
- Personal computer .....2- 1
- Printer .....2- 3
- Print function .....6- 2
- Print preview .....6- 2

## [R]

- Resolution .....2- 1
- Restrictions on and instructions for GX Simulator .....3- 4
- Restrictions on and instructions for PLC CPU connection .....3- 5
- Restrictions on and instructions for use of GT Simulator .....3- 3

## [S]

- Screen configuration
  - Title bar .....4- 1
  - Menu bar .....4- 1
  - Dropdown menu .....4- 1
  - Tool bar .....4- 2
- Simulating operation .....5- 8
- Simulator procedure outline.....5- 1
- Snap shot function .....6- 1
- Specifications
  - Specifications of the GOTs simulated .....3- 1
  - Functions that cannot be simulated.....3- 1
- System configuration
  - System configuration at installation of GT Simulator .....2- 1
  - System configuration for GT Simulator execution .....2- 3

[T]	
Troubleshooting.....	8- 1
[U]	
Utility function .....	3- 2

Microsoft Windows, Microsoft Windows NT are registered trademarks of Microsoft Corporation in the United States and other countries.

Pentium is a registered trademark of Intel Corporation in the United States and other countries.

Other company and product names herein are either trademarks or registered trademarks of their respective owners.

SPREAD

Copyright (C) 1998 Farpoin Technologies, Inc.

# GT Simulator Version5

## Operating Manual

MODEL	SW5-GTSIM-O-E
MODEL CODE	1DM191
SH(NA)-080120-I(0406)MEE	

 **MITSUBISHI ELECTRIC CORPORATION**

HEAD OFFICE : 1-8-12, OFFICE TOWER Z 14F HARUMI CHUO-KU 104-6212, JAPAN  
NAGOYA WORKS : 1-14 , YADA-MINAMI 5-CHOME , HIGASHI-KU, NAGOYA , JAPAN

When exported from Japan, this manual does not require application to the Ministry of Economy, Trade and Industry for service transaction permission.

Specifications subject to change without notice.